

Lubrication pump CLP

for progressive systems



Created on: **20.11.2023**

Document no.: **951-171-064-EN**

Version: **11**



Read these instructions before installation or start-up of the product and keep them readily available for consultation.

Original EC Declaration of Incorporation in accordance with Directive 2006/42/EC, Appendix II Part 1 B

The manufacturer hereby declares at its sole responsibility that the partly completed machinery conforms to the essential health and safety requirements of the Machinery Directive 2006/42/EC, Annex I, marked in the Annex to the EC Declaration of Incorporation as applicable and fulfilled at the time of placing on the market.

The special technical documents were prepared following Annex VII part B. Upon justifiable request, these special technical documents can be forwarded electronically to the respective national authorities. The authorized company for the compilation of the technical documentation is the manufacturer.

Designation: Electrically operated pump for the feeding of lubricants in interval operation inside a centralized lubrication system
Type: CLP-xxxxxx-xxxx-xxxx-xxxxxx

Furthermore, the following directives and standards were applied in the respective applicable areas:

2006/42/EC: Machinery Directive

2011/65/EU: RoHS II

2014/30/EU: Electromagnetic Compatibility

EN ISO 12100:2010

EN 60204-1:2018

EN 809:1998+A1:2009/AC:2010

EN 61000-6-2:2005/AC:2005

EN 61000-6-4:2007/A1:2011

EN IEC 63000:2018

The partly completed machinery must not be put into service until it has been established that the machinery into which it is to be incorporated is in compliance with the provisions of the Machinery Directive 2006/42/EC and all other applicable Directives.

Walldorf, 01.11.2021

Jürgen Kreutzkämper
Manager R&D Germany



Dr. Holger Schmidt
Manager Modularization
SKF Lubrication Management



Hersteller: SKF Lubrication Systems Germany GmbH, Heinrich-Hertz-Str. 2-8, DE - 69190 Walldorf

Original UK Declaration of incorporation according to the Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex II

The manufacturer hereby declares under sole responsibility that the partly completed machinery complies with the essential health and safety requirements of UK legislation Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex I, marked in the Annex to the EC Declaration of Incorporation as applicable and fulfilled at the time of placing on the market.

The special technical documents were prepared following Annex VII part B. Upon justifiable request, these special technical documents can be forwarded electronically to the respective national authorities. The authorized company for the compilation of the technical documentation is SKF (U.K.) Limited, 2 Canada Close, Banbury, Oxfordshire, OX16 2RT, GBR.

Designation: Electrically operated pump for the feeding of lubricants in interval operation inside a centralized lubrication system
Type: CLP-xxxxxx-xxxx-xxxx-xxxxxx

Furthermore, the following regulations and standards were applied in the respective applicable areas:

Supply of Machinery (Safety) Regulations 2008 No. 1597

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 No. 3032

Electromagnetic Compatibility Ordinance 2016 No. 1091

EN ISO 12100:2010

EN 60204-1:2018

EN 809:1998+A1:2009/AC:2010

EN 61000-6-2:2005/AC:2005

EN 61000-6-4:2007/A1:2011

EN IEC 63000:2018

The partly completed machinery must not be put into service until it has been established that the machinery into which it is to be incorporated is in compliance with the provisions of UK legislation Supply of Machinery (Safety) Regulations 2008 No. 1597 and all other applicable Directives.

Walldorf, 01.11.2021

Jürgen Kreutzkämper
Manager R&D Germany



Dr. Holger Schmidt
Manager Modularization
SKF Lubrication Management



Hersteller: SKF Lubrication Systems Germany GmbH, Heinrich-Hertz-Str. 2-8, DE - 69190 Walldorf

Appendix to Declaration of Incorporation in accordance with 2006/42/EC, Annex II, No. 1 B

Description of the essential health and safety requirements according to 2006/42/EC, Annex I, which have been applied and fulfilled. Any essential health and safety requirements not listed here are not relevant to this product.

Table 1

Appendix to Declaration of Incorporation
Valid for: CLx lubricant feed pumps

No.:	Essential health and safety requirement	Applicable:	Fulfilled:
1.1.1	Definitions	Yes	Yes
1.1.2	Principles of safety integration	Yes	Yes
1.1.3	Materials and products	Yes	Partially ¹⁾
1.1.5	Design of machinery to facilitate its handling	Yes	Yes
1.1.6	Ergonomics	Yes	Partially ²⁾
1.2	Control systems	Yes	Yes
1.2.1	Safety and reliability of control systems	Yes	Yes
1.2.3	Starting	Yes	Yes
1.2.6	Failure of the power supply	Yes	Yes
1.3	Protection against mechanical hazards	Yes	Yes
1.3.1	Risk of loss of stability	Yes	Yes
1.3.2	Risk of break-up during operation	Yes	Partially ³⁾
1.3.4	Risks due to surfaces, edges or angles	Yes	Yes
1.3.7	Risks related to moving parts	Yes	Yes
1.3.9	Risks of uncontrolled movements	Yes	Yes
1.5	Risks due to other hazards	Yes	Yes
1.5.1	Electricity supply	Yes	Yes
1.5.6	Fire	Yes	Yes
1.5.8	Noise	Yes	Yes
1.5.11	External radiation	Yes	Yes
1.5.13	Emissions of hazardous materials and substances	Yes	Yes
1.5.15	Risk of slipping, tripping, or falling	Yes	Yes
1.6	Servicing		
1.6.1	Machinery maintenance	Yes	Yes
1.6.2	Access to operating positions and servicing points	Yes	Partially ⁴⁾
1.6.4	Operator interventions	Yes	Yes
1.7	Information	Yes	Yes
1.7.1	Information and warnings on the machinery	Yes	Yes
1.7.1.1	Information and information devices	Yes	Yes
1.7.2	Warning of residual risks	Yes	Yes
1.7.3	Marking of machinery	Yes	Yes
1.7.4	Operating instructions/assembly instructions	Yes	Yes
1.7.4.1	General principles for the drafting of operating instructions/assembly instructions	Yes	Yes
1.7.4.2	Contents of the operating instructions/assembly instructions	Yes	Yes
1.7.4.3	Sales literature	Yes	Yes

- 1) Not completely fulfilled: Hazards due to the lubricant used must be assessed by the operator on the basis of the Safety Data Sheet (SDS) and, if necessary, protective measures must be taken.
- 2) Not completely fulfilled: The operator must ensure that the pump is integrated into the higher-level machine in such a way that the pump can be operated and filled ergonomically.
- 3) Not completely fulfilled: The operator must protect the lubrication system against excessive pressure. For this purpose, a pressure relief valve with max. 270 bar opening pressure must be provided on each pump element.
- 4) Not completely fulfilled: The operator must ensure that the pump is integrated into the higher-level machine in such a way that the pump can be operated without danger.

Masthead

Manufacturer

SKF Lubrication Systems Germany GmbH
Email: Lubrication-germany@skf.com
www.skf.com/lubrication

Berlin Plant
Motzener Strasse 35/37
12277 Berlin
Germany
Tel. +49 (0)30 72002-0
Fax +49 (0)30 72002-111

Walldorf Plant
Heinrich-Hertz-Strasse 2-8
69190 Walldorf, Germany
Germany
Tel.: +49 (0) 6227 33-0
Fax: +49 (0) 6227 33-259

Authorized local distributors

- Great Britain -
SKF (U.K.) Limited,
2 Canada Close, Banbury, Oxfordshire,
OX16 2RT, GBR.

- North America -
SKF Lubrication Business Unit
Lincoln Industrial
5148 North Hanley Road, St. Louis,
MO. 63134 USA

- South America -
SKF Argentina Pte. Roca 4145,
CP 2001 Rosario, Santa Fe

Warranty

The instructions contain no statements regarding the warranty or liability for defects. That information can be found in our General Terms of Payment and Delivery.

Training

We conduct detailed training in order to enable maximum safety and efficiency. We recommend taking advantage of this training. For further information, contact your authorized SKF dealer or the manufacturer.

Table of contents

Original EC Declaration of Incorporation in accordance with Directive 2006/42/EC, Appendix II Part 1 B	2
Original UK Declaration of incorporation according to the Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex II	2
Masthead	4
Table of contents	5
Safety alerts, visual presentation, and layout	7
1 Safety instructions	8
1.1 Intended use	8
1.2 Persons authorized to use the product	8
1.3 General behavior when handling the product	8
1.4 Transport, assembly, maintenance, malfunction, repair, shutdown, disposal	8
1.5 First start-up, daily start-up	9
1.6 Foreseeable misuse	9
1.7 Referenced documents	9
1.8 Safety markings on the product	9
1.9 Note on the type plate	9
1.10 Notes on CE marking	10
1.11 Note on Low Voltage Directive	10
1.12 Note on Pressure Equipment Directive	10
1.13 Note on UL mark	10
1.14 Note on ECE mark	10
1.15 Note on UKCA marking	10
1.16 Note on EAC marking	10
1.17 Note on China RoHS mark	10
1.18 Prohibition of certain activities	10
1.19 Residual risks	11
2 Lubricants	12
2.1 General information	12
2.2 Material compatibility	12
2.3 Temperature properties	12
2.4 Aging of lubricants	12
2.5 Avoidance of faults and hazards	12
2.6 Solid lubricants	12
3 Overview, functional description	13
3.1 Pump housing, upper part	13
3.2 Electrical connections	13
3.3 Button for additional lubrication	14
3.4 Reservoir	14
3.5 Pump housing, lower part	14
4 Technical data	15
4.1 Diagram relative duty cycle	16
4.2 Tightening torques	16
4.3 Hydraulic connection diagrams	17
4.4 Type identification code	18
5 Delivery, returns, storage	20
5.1 Delivery	20
5.2 Return shipment	20
5.3 Storage	20
5.4 Storage temperature range	20
5.5 Storage conditions for products filled with lubricant	20
5.5.1 Storage period up to 6 months	20
5.5.2 Storage period between 6 and 18 months	20
5.5.3 Storage period more than 18 months	20

6 Assembly	21
6.1 Installation dimensions	21
6.2 Installation bores	21
6.3 Setting the delivery rate on pump element R	22
6.4 Mount pressure control valve	22
6.5 Connection of the lubrication line	22
6.6 Electrical connection	23
7 First start-up	24
7.1 Inspections prior to initial start-up	24
7.2 Inspections during initial start-up	24
7.3 Triggering additional lubrication	25
7.3.1 Pumps without control but with optional button for additional lubrication	25
7.3.2 Pumps without control and without optional button for additional lubrication	25
7.4 Acknowledge receipt of a fault indication	25
8 Operation	26
8.1 Initial filling of a pump delivered without lubricant	26
8.2 Regular filling with a transfer pump	26
8.3 Regular filling with cartridge	27
8.4 Regular filling via the filler nipple	27
9 Maintenance	28
9.1 Maintenance	28
10 Cleaning	29
10.1 Basics	29
10.2 Interior cleaning	29
10.3 Exterior cleaning	29
10.4 Cleaning the vent pipe	29
11 Faults, causes, and remedies	30
12 Repairs	31
12.1 Replace pump element and pressure control valve	31
13 Shutdown, disposal	31
13.1 Temporary shutdown	31
13.2 Permanent shutdown, disassembly	31
13.3 Disposal	31
14 Spare parts and accessories	32
14.1 Pump elements	32
14.2 Pressure control valves 270 bar, plug-in type for tube Ø 6	32
14.3 Pressure control valves 270 bar, screw-in type for tube Ø 6	32
14.4 Adapter with filler nipple	33
14.5 Closure screw	33
14.6 Grease port, plug-in	33
14.7 Fill connection, pivoted	33
14.8 Grease port, plug-in	34
14.9 Filling connection, screwable	34
14.10 Grease port with lubricant return	35
14.11 Grease port without lubricant return	35
14.12 Vent pipe assy	35
14.13 Mounting brackets	36
14.14 Power lead	36
14.15 Adapter cable	36
15 Appendix	37
15.1 Connection diagrams	37
15.2 Overview of cables and possible connections	38
15.3 CL_-__1XY/Z_-X_FX-__X-MXX(7)(7)	39
15.4 CL_-__1XY/Z_-X_FX-__X-M(A)(A)(7)(7)	40

15.5 CL_-__1XX_-X_FX-__X-MXX(7)(7)_.....	41
15.6 CL_-__1XX_-X_FX-__X-M(A)(A)(4)(4)_.....	42
15.7 CL_-__XXY/Z_-X____-__X-MXX(7)(7)_.....	43
15.8 CL_-__XXX_-X_X-__X-MXX(4)(4)_.....	44
15.9 CL_-__1XY/Z_-X_FX-__X-X(A)(A)(W)(W)_.....	45
15.10 CL_-__1XX_-X_FX-__X-X(A)(A)(W)(W)_.....	46
15.11 CL_-__XXY/Z_-X____-__X-XXX(W)(W)_.....	47
15.12 CL_-__XXX_-X____-__X-XXX(W)(W)_.....	48
15.13 China RoHS Table.....	49

Safety alerts, visual presentation, and layout

While reading these instructions, you will encounter various symbols, illustrations, and text layouts intended to help you navigate and understand the instructions. Their meaning is explained below.

Safety alerts:

Activities that present specific hazards (to life and limb or possible damage to property) are indicated by safety alerts. Always be sure to follow the instructions given in the safety alerts.

DANGER

These safety alerts indicate an imminent danger. Ignoring them will result in death or serious injury

WARNING

These safety alerts indicate potentially imminent danger. Ignoring them could result in death or serious injury

CAUTION

These safety alerts indicate potentially imminent danger. Ignoring them could result in minor injury

NOTICE

These safety alerts indicate a potentially harmful situation. Ignoring them could result in damage to property or malfunctions

Illustrations:

The illustrations used depict a specific product. For other products, they may have the function of a diagram only. This does not alter the basic workings and operation of the product.

Text layout:

- **First-order bulleted lists:** Items on a bulleted list start with a solid black dot and an indent.
 - **Second-order bulleted lists:** If there is a further listing of subitems, the second-order bulleted list is used.
- 1 **Legend:** A legend explains the numbered contents of an illustration, presented as a numbered list. Items in a legend start with a number (with no dot) and an indent.
 - **Second-order legend:** In some cases, the numbered contents of an image represent more than just one object. A second-order legend is then used.

1. **Instruction steps:** These indicate a chronological sequence of instruction steps. The numbers of the steps are in bold and are followed by a period. If a new activity follows, the numbering starts again at “1.”

- **Second-order instruction steps:** In some cases, it is necessary to divide up a step into a few substeps. A sequence of second-order instruction steps is then used.

1 Safety instructions

1.1 Intended use

Supply of lubricants.

The product is intended solely for installation in another machine.

Use is only permitted within the scope of commercial or economic activity by professional users, in compliance with the specifications, technical data, and limits specified in this manual.

1.2 Persons authorized to use the product

Operator

A person who is qualified by training, knowledge and experience to carry out the functions and activities related to normal operation. This includes avoiding possible hazards that may arise during operation.

Specialist in mechanics

Person with appropriate professional education, knowledge and experience to detect and avoid the hazards that may arise during transport, installation, start-up, operation, maintenance, repair and disassembly.

Specialist in electrics

Person with appropriate professional education, knowledge and experience to detect and avoid the hazards that may arise from electricity.

1.3 General behavior when handling the product

Putting the product into operation or operating it without having read the instructions is prohibited. The operator must ensure that the instructions are read and understood by all persons tasked with working on the product or who supervise or instruct such persons. Retain the instructions for further use.

The product may only be used in awareness of the potential dangers, in proper technical condition, and according to the information in this manual. All operating instructions, safety instructions, and in-house instructions relevant to the particular activity must be followed. Uncertainty seriously endangers safety. Responsibilities for different activities must be clearly defined and observed. In addition to these instructions, the statutory regulations for accident prevention and environmental protection must be observed.

Any faults that could affect safety must be remedied according to responsibility. The supervisor must be notified immediately in case of malfunctions outside one's individual scope of responsibility. Guards and safety devices must not be removed, modified, nor disabled during operation and must be checked for proper function and completeness at regular intervals.

Unauthorized modifications and changes can have an unpredictable effect on safety and operation. Unauthorized modifications and changes are therefore prohibited.

Tasks in the context of repair or maintenance work may be carried out only with the spare parts and accessories offered by SKF for the respective product.

Any unclear points regarding proper condition or correct assembly/operation must be clarified. Operation is prohibited until issues have been clarified.

The painting of any plastic components, visual monitoring devices or seals is prohibited. Completely mask or remove parts before painting.

Electrical devices must be kept in proper condition. This must be ensured by periodic inspections in accordance with the relevant applicable standards and technical rules. The type, frequency, and scope of the inspections must be determined in accordance with the risk assessment to be carried out by the operator. Work on electrical components may be performed only by qualified electricians. Connect the electrical power only in accordance with the valid terminal diagram and in observance of the relevant regulations and the local electrical supply conditions. The operator must implement appropriate measures to protect vulnerable electrical devices from the effects of lightning during use. The electrical device is not furnished with a grounding system for the dissipation of the respective electric charge and does not have the voltage strength necessary to withstand the effects of lightning.

1.4 Transport, assembly, maintenance, malfunction, repair, shutdown, disposal

Prior to the start of this work, all relevant persons must be notified of it. At a minimum, the following safety measures must be taken before any work is done:

- Unauthorized persons must be kept away
- Mark and secure the work area
- Cover adjacent live parts
- Dry any wet, slippery surfaces or cover them appropriately
- Cover hot or cold surfaces appropriately

Where applicable:

- Depressurize
- Isolate, lock and tag out
- Check to ensure live voltage is no longer present
- Ground and short-circuit

The product should be protected as much as possible from humidity, dust, and vibration, and should be installed so that it is easily accessible. Ensure an adequate distance from sources of heat or cold. Any visual monitoring devices present, such as pressure gauges, min./max. markings, or oil level gauges must be clearly visible. Observe the mounting position requirements.

Drill required holes only on non-critical, non-load-bearing parts of the operator's infrastructure. Use existing holes where possible. Other units must not be damaged or impaired in their function by the installation work.

Avoid chafe points when installing. Immobilize any moving or detached parts during the work. Adhere to the specified torques.

If guards or safety devices need to be removed, they must be reinstalled immediately following conclusion of work and then checked for proper function.

Check new parts for compliance with the intended use before using them. Avoid mixing up or incorrectly assembling disassembled parts. Label parts. Clean any dirty parts.

The components used must be suitable for the intended use and the applicable operating conditions, e.g. max. operating pressure and ambient temperature range, and must not be subjected to torsion, shear, or bending.

Shutdown in an emergency is to be performed by measures specified by the operator, e.g. by pressing the emergency stop switch of the higher-level machine or by cutting off the power supply.

In the case of electrical products, the following must also be observed:

- Work on electrical components may be performed only in a voltage-free state and using tools suitable for electrical work.
- Do not touch cables or electrical components with wet or damp hands.
- Fuses must not be bridged. Always replace defective fuses with fuses of the same type.
- Ensure proper connection of the protective conductor for products with protection class I. Observe the specified enclosure rating.

1.5 First start-up, daily start-up

Ensure that:

- All safety devices are fully present and functional
- All connections are properly connected
- All parts are correctly installed
- All warning labels on the product are fully present, visible, and undamaged
- Illegible or missing warning labels are immediately replaced

1.6 Foreseeable misuse

Any usage of the product other than as specified in this manual is strictly prohibited. Particularly prohibited are:

- Use of non-specified consumables, contaminated lubricants, or lubricants with air inclusions.
- Use of C3 versions in areas with aggressive, corrosive substances (e.g., high salt load).
- Use of plastic parts in areas with high exposure to ozone, UV light, or ionizing radiation.
- Use to supply, convey, or store hazardous substances and mixtures as defined in the CLP Regulation (EC 1272/2008) or GHS with acute oral, dermal, or inhalation toxicity or substances and mixtures that are marked with hazard pictograms GHS01-GHS06 and GHS08.
- Use to supply, convey, or store Group 1 fluids classified as hazards as defined in the Pressure Equipment Directive (2014/68/EU) Article 13 (1) a).
- Use to supply, convey, or store gases, liquefied gases, dissolved gases, vapors, or fluids whose vapor pressure exceeds normal atmospheric pressure (1013 mbar) by more than 0.5 bar at their maximum permissible operating temperature.
- Use in an explosion protection zone.

- Use without proper securing against excessively high pressures, in the case of pressurized products.
- Use outside of the technical data and limits specified in this manual.

1.7 Referenced documents

In addition to this manual, the following documents must be observed by the respective target group:

- Company instructions and approval rules If applicable:
- Safety data sheet of the lubricant used
- Project planning documents
- Supplementary information regarding special designs of the pump. This you will find in the special system documentation.
- Instructions for other components for setting up the centralized lubrication system.

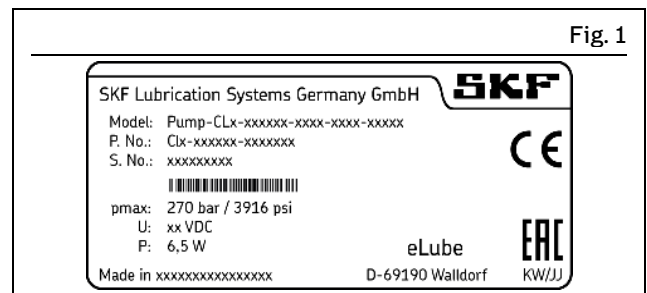
1.8 Safety markings on the product

NOTE


Further to the findings of the workplace risk evaluation the operating company has to attach additional markings (e. g. warnings, signs giving orders, prohibition signs or labelling as specified by CLP / GHS), where appropriate.

1.9 Note on the type plate

The type plate provides important data such as the type designation, order number, and sometimes regulatory characteristics. To avoid loss of this data in case the type plate becomes illegible, it should be entered in the manual.



Type plate

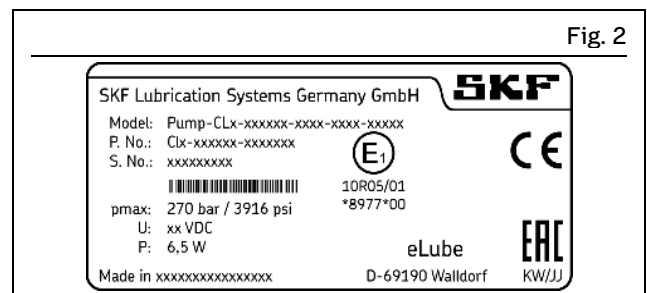

Type plate with ECE mark

1.10 Notes on CE marking



CE marking is effected following the requirements of the applied directives requiring a CE marking:

- 2006/42/EG Machinery Directive
- 2014/30/EC Electromagnetic Compatibility
- 2011/65/EU Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS II)

1.11 Note on Low Voltage Directive

The protection objectives of the Low Voltage Directive 2014/35/EU are met in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

1.12 Note on Pressure Equipment Directive

Due to its performance characteristics, the product does not reach the limit values defined in Article 4, Paragraph 1, Subparagraph (a) (ii) and is excluded from the scope of Pressure Equipment Directive 2014/68/EU in accordance with Article 1, Paragraph 2 Subparagraph (f).

1.13 Note on UL mark



The UL Mark certifies that the product has UL certification of compliance with U.S. and Canadian safety regulations.

1.14 Note on ECE mark



The ECE test mark (E1) confirms that an ECE type approval (components requiring approval on motor vehicles) has been granted for a product which bears this mark on its type plate.

1.15 Note on UKCA marking



The UKCA conformity marking confirms the product's conformity with the applicable legal provisions of Great Britain.

1.16 Note on EAC marking



The EAC conformity marking confirms the product's conformity with the applicable legal provisions of the Eurasian customs union.

1.17 Note on China RoHS mark



The China RoHS mark confirms that there is no danger to persons or the environment from the regulated substances contained within for the intended period of use (year number shown in the circle).

1.18 Prohibition of certain activities

- Repairs or modifications to the drive.
- Replacement of or modifications to the pistons of the pump elements

1.19 Residual risks

Table 2

Residual risks		
Residual risk	Possible in lifecycle	Avoidance / Remedy
Personal injury / property damage due to falling of hoisted parts.	A B C G H K	Unauthorized persons must be kept away. Nobody is allowed to be present below hoisted parts. Lift parts using suitable lifting gear.
Personal injury / property damage due to tilting or falling product due to non-compliance with specified torques.	B C G	Adhere to the specified torques. Mount the product only on components with a sufficient load-carrying capacity. If no torques are specified, use those specified for the screw size for screws of strength class 8.8.
Personal injury, property damage due to spilled, leaked lubricant.	B C D F G H K	Be careful when connecting or disconnecting the lubricant lines. Use only hydraulic screw unions and lubrication lines suitable for the specified pressure. Do not mount lubrication lines on moving parts or chafe points. If this cannot be avoided, use anti-kink coils and/or conduits.
Fire hazard or damage to the pump from operation with damaged electrical components, such as power leads and plugs.	B C D E F G H	Inspect electrical components for damage prior to initial use and then at regular intervals. Do not install the cable on moving parts or chafe points. If this cannot be avoided, use anti-kink coils and/or conduits.
Damage to the pump from failure to comply with the permissible relative ON-time.	C D	Operate the pump only within the permissible relative ON-time.
Damage to the pump from installing at the place of use without the mounting brackets and fastening hardware intended for that purpose (see Installation chapter).	B C D G	Install the pump only with the mounting brackets and fastening hardware intended for that purpose.

Lifecycle phases: A = Transport, B = Assembly, C = First start-up, D = Operation, E = Cleaning, F = Maintenance, G = Malfunction, repair, H = Shutdown, K = Disposal

2 Lubricants

2.1 General information

Lubricants are selected specifically for the relevant application. The manufacturer or operator of the machine should ideally make the selection in consultation with the supplier of the lubricant. If you have no or little experience in selecting lubricants for lubrication systems, please contact us. We would be happy to assist you in selecting suitable lubricants and components to build a lubrication system optimized for your particular application. Consider the following points when selecting/using lubricants. This will spare you potential downtime and damage to the machine or lubrication system.

2.2 Material compatibility

The lubricants must generally be compatible with the following materials:

- Plastics: ABS, CR, FPM, NBR, NR, PA, PET, PMMA, POM, PP, PS, PTFE, PU, PUR
- Metals: steel, gray cast iron, brass, copper, aluminum.

2.3 Temperature properties

The lubricant used must be suitable for the specific ambient temperature of the product. The viscosity approved for proper functioning must neither be exceeded at low temperatures nor fall too low at high temperatures. For the approved viscosity, see the "Technical data" chapter.

2.4 Aging of lubricants

Based on past experience with the lubricant used, checks should be conducted at regular intervals defined by the operator, to determine whether the lubricant needs to be replaced due to aging processes (oil separation). In case of doubt regarding the continued suitability of the lubricant, it must be replaced before the system is started up again. If you do not yet have any experience with the lubricant used, we recommend conducting a check after just one week.

2.5 Avoidance of faults and hazards

To avoid faults and hazards, please observe the following:

- When handling lubricants, observe the relevant safety data sheet (SDS) and any hazard labeling on the packaging.
- Due to the large number of additives, some lubricants that meet the pumpability requirements specified in the manual are not suitable for use in centralized lubrication systems.
- Whenever possible, always use SKF lubrication greases. They are ideal for use in lubrication systems.
- Do not mix lubricants. This can have unpredictable effects on the properties and usability of the lubricant.
- Use lubricants containing solid lubricants only after technical consultation with SKF.
- The lubricant's ignition temperature has to be at least 50 kelvin above the maximum surface temperature of the components.

2.6 Solid lubricants

Solid lubricants may only be used after prior consultation with SKF. When solid lubricants are used in lubrication systems, the following rules generally apply:

Graphite:

- Maximum graphite content 8%
- Maximum grain size 25 µm (preferably in lamellar form).

MoS₂:

- Maximum MoS₂ content 5%
- Maximum grain size 15 µm.

Copper:

- Lubricants containing copper are known to lead to coatings forming on pistons, bore holes, and mating surfaces. This can result in blockages in the centralized lubrication system.

Calcium carbonate:

- Lubricants containing calcium carbonate are known to lead to very heavy wear on pistons, bore holes, and mating surfaces.

Calcium hydroxide:

- Lubricants containing calcium hydroxide are known to harden considerably over time, which can lead to failure of the centralized lubrication system.

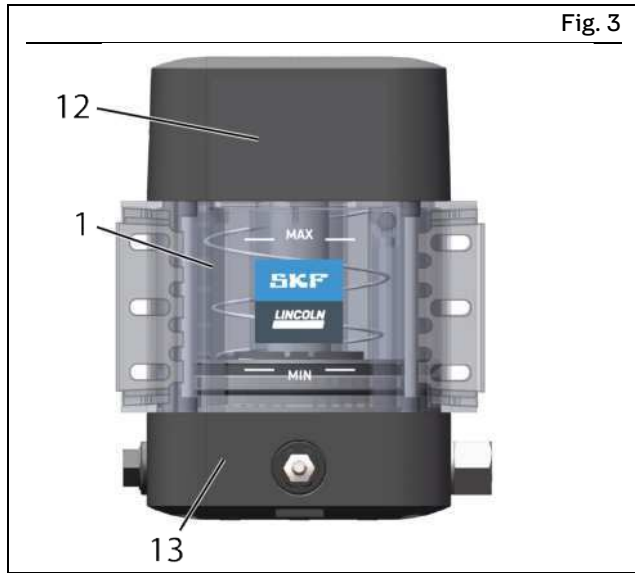
PTFE, zinc, and aluminum:

- For these solid lubricants, it is not yet possible to define any limit values for use in lubrication systems on the basis of existing knowledge and practical experience.


3 Overview, functional description

In the following you will find an overview of the most important functions and equipment features of the pump described in this manual. The pump essentially consists of 3 modules:

- The upper part of the pump housing (12 or 12a)
- The reservoir (1)
- The lower part of the pump housing (13)



CLP pump, front view

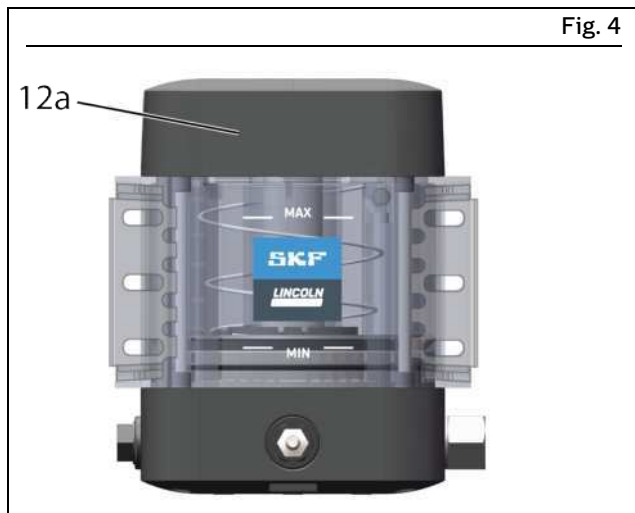

CLP pump with flat upper part on pump housing, front view

3.1 Pump housing, upper part

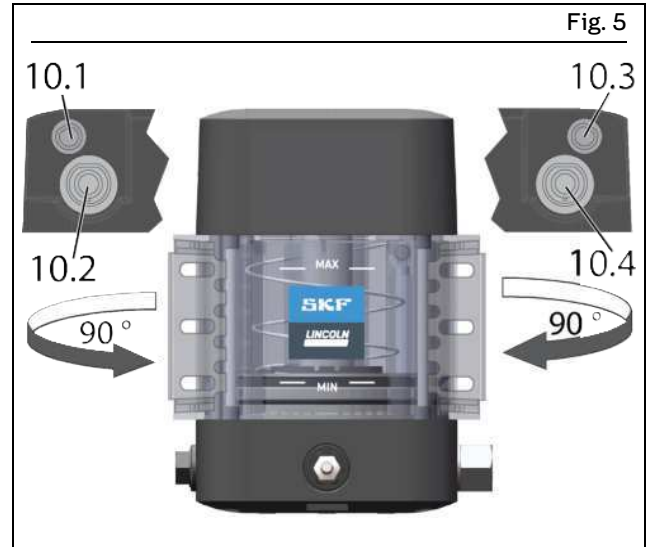
The upper part of the pump housing (12) contains the electrical connections and possibly a button to trigger an additional lubrication.

Pump housing, flat upper part

The pump housing with flat upper part (12a) is standard on pumps without an M12 plug.

3.2 Electrical connections

The electrical connections (10.1 to 10.4) are used for the power supply and for signals and communications. The following electrical connections are possible depending on the exact version of the pump.




Electrical connections

Table 3	
Possible positions of the electrical connections	
Top left (10.1) or top right (10.3)	M12x1 plug, 5-pin, A-coded DIN EN ISO 61076-2-101
Bottom left (10.2) or bottom right (10.4)	Bayonet connector, 4-pin A-coded ISO 15170-1
	Bayonet connector, 7-pin A-coded ISO 15170-1
	Rectangular connector 3 + PE DIN EN 175301-803

3.3 Button for additional lubrication

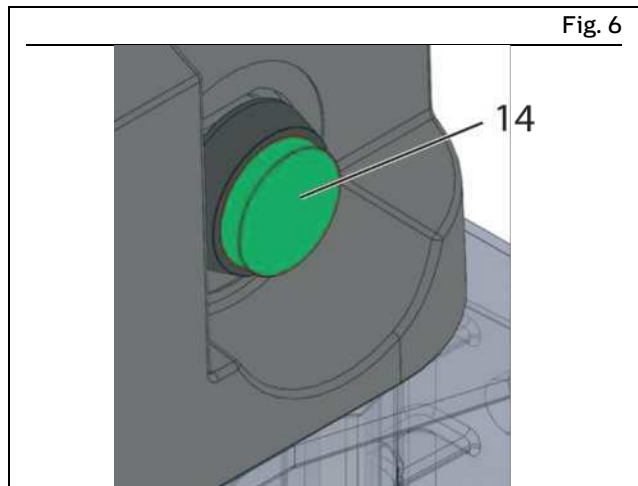On pumps without control, there can optionally be a button (14) on the right or the left of the upper part of the pump housing, to trigger an additional lubrication. An additional lubrication can be triggered only during the pump's interval time. The additional lubrication continues as long as the button is pressed.



Button for additional lubrication

3.4 Reservoir

The reservoir (1) stores the lubricant. The follower plate (2) is positioned on top of the lubricant and presses against it with spring force in the direction of the pump elements. This improves the suction characteristics of the pump, and the pump can then also be used for rotary applications.

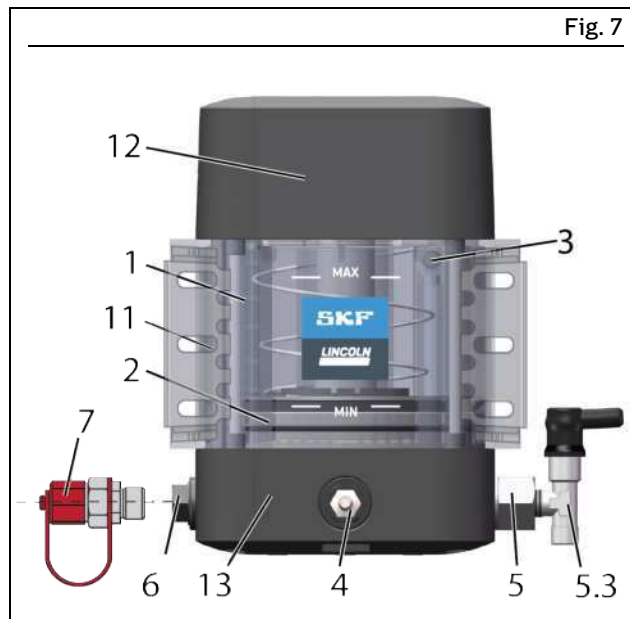
The reservoir ventilation (3) aerates the reservoir while the pump is running and conveying lubricant and bleeds the reservoir when the pump is being filled with lubricant. The MAX marking must not be exceeded when the reservoir is being filled with lubricant. As a rule, the lubricant level must not fall below the MIN marking during pump operation.

Different variants of the pump come with different reservoir designs, with and without low-level signal. The pumps with low-level signal have a magnet in the follower plate which issues a low-level signal when it reaches the reed contact in the contact rod (11).

NOTICE

Damage to the main machine from pump failure due to empty reservoir

Take care to ensure that the lubricant level does not fall below the MIN marking during pump operation.



CLP pump, front view

3.5 Pump housing, lower part

The lower part of the pump housing contains:

Pump elements

The pump can be fitted with up to two pump elements (5) at positions 5, 6 or 4. Each pump element must be secured with a pressure relief valve (5.3) that is suitable for the maximum permissible operating pressure for which the centralized lubrication system is designed.

If an outlet is not needed, it can be sealed off with a plug screw (6). Alternatively, a grease port (7) can also be fitted.

Filler nipple

The filler nipple (4) can be used to fill the pump with lubricant. If a grease port (7) is present, the pump should ideally be filled through that grease port.

4 Technical data

Table 4

General technical data				
Operating pressure	270 bar max.	Installation position ²⁾	vertical	
Ambient temperature ¹⁾	-25 °C to 65 °C	sound pressure level	< 70 dB (A)	
Pump elements	max. 2 pieces	Weight (empty)	5 kg	
Reservoir volume ³⁾	1 liter nominal			
Approved lubricants	Lubrication greases from NLGI 0 up to NLGI 2			
Filling	Filler fitting Filler coupling Cartridge filling			
Rated output ⁴⁾ of the single pump elements				
Pump element	5	6	7	R
Output per stroke	0.10	0.16	0.22	0.04-0.18 cc
Output per minute	1.90	3.04	4.18	0.76-3.42 cc
Electrical data				
	12 V DC pump		24 V DC pump	
Rated voltage	12 VDC ± 10 %		24 VDC ± 10 %	
Max. power consumption	4 A		3 A	
Recommended back-up fuse	4.0 A (slow-blow)		3.0 A (slow-blow)	
Nominal speed	19 rpm		19 rpm	
Relative duty cycle	15 % ED S3 30 minutes		15 % ED S3 30 minutes (also see diagram on next page)	
Degrees of protection ⁵⁾				
Pumps with Bayonet-plug	IP69K (ISO 20653)		IP69K (ISO 20653)	
Pumps with M12-plug	IP67 (IEC 60529)		IP67 (IEC 60529) 4x (Nema)	
Pumps with Rectangular connector	IP65 (IEC 60529)		IP65 (IEC 60529) 4x (Nema)	
Max. switching capacity	5 W / 5 VA		5 W / 5 VA	
Switching voltage of low-level signal	10-30 V AC/DC		10-30 V AC/DC	
Max. switching current	500 mA		500 mA	
Protection class Connection Nominal voltage (IEC 61140)				
Protection class Connection Signal line (IEC 61140)	III		III	

¹⁾ The minimum admissible ambient temperature assumes that the lubricant used can be pumped.

²⁾ Pumps with follower plate allow for a rotating installation as well, e. g. in wind turbine generators. Maximum speed and maximum distance to the rotation axis on request.


³⁾ To fill an empty pump approx. 1.2 litres of lubricant are required, as the space below the intermediate plate must be initially filled with lubricant.

⁴⁾ For pumps with pump elements 5, 6, 7, R, the nominal output refers to greases of NLGI 2 at an ambient temperature of +20 °C and a back pressure at the pump element of 100 bar.

⁵⁾ The specified degree of protection assumes that corresponding connection sockets and cables are used. When using connection sockets and cables with a lower degree of protection, classification is made according to the lowest degree of protection.

4.1 Diagram relative duty cycle

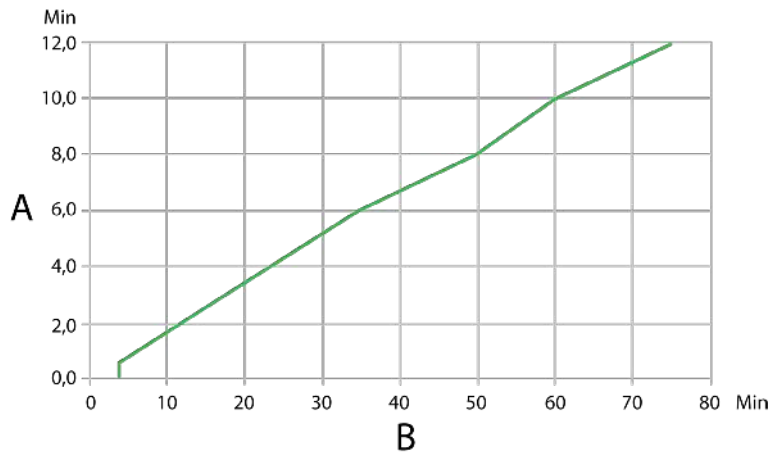Table 5




A = Pump runtime in minutes

B = Minimum pause time in minutes

4.2 Tightening torques

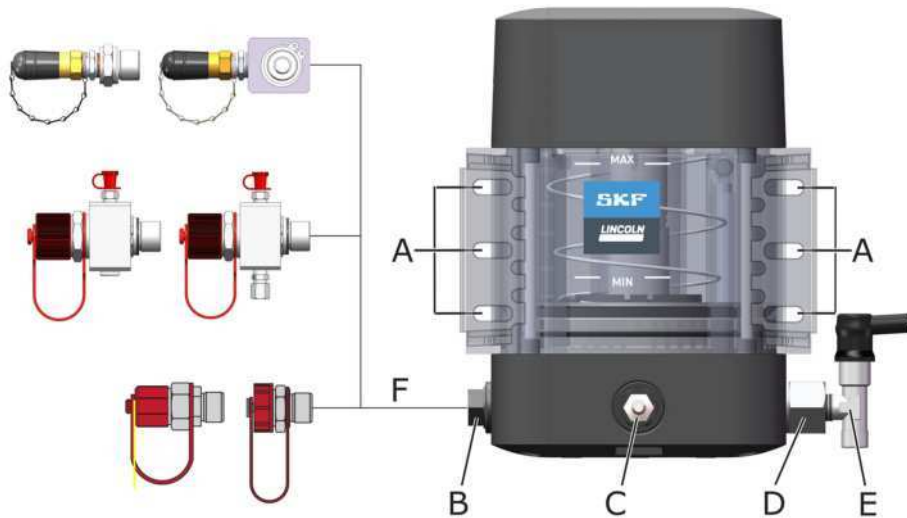
Fig. 8



A	Pump at the place of use	10 Nm ± 1.0 Nm	7.40 ft.lb. ± 0.74 ft.lb.
B	Plug screw in housing	10 Nm ± 1.0 Nm	7.40 ft.lb. ± 0.74 ft.lb.
C	Grease fitting in housing	10 Nm ± 1.0 Nm	7.40 ft.lb. ± 0.74 ft.lb.
D	Pump element in housing	20 Nm ± 2.0 Nm	14.43 ft.lb. ± 0.15 ft.lb.
E	Pressure relief valve in pump element	6 Nm - 0.5 Nm	4.43 ft.lb. - 0.07 ft.lb.
F	Optional grease port in housing	20 Nm ± 2.0 Nm	14.43 ft.lb. ± 0.15 ft.lb.
	Center screw of rectangular connector (not shown)	0.5 Nm	0.37 ft.lb.

4.3 Hydraulic connection diagrams

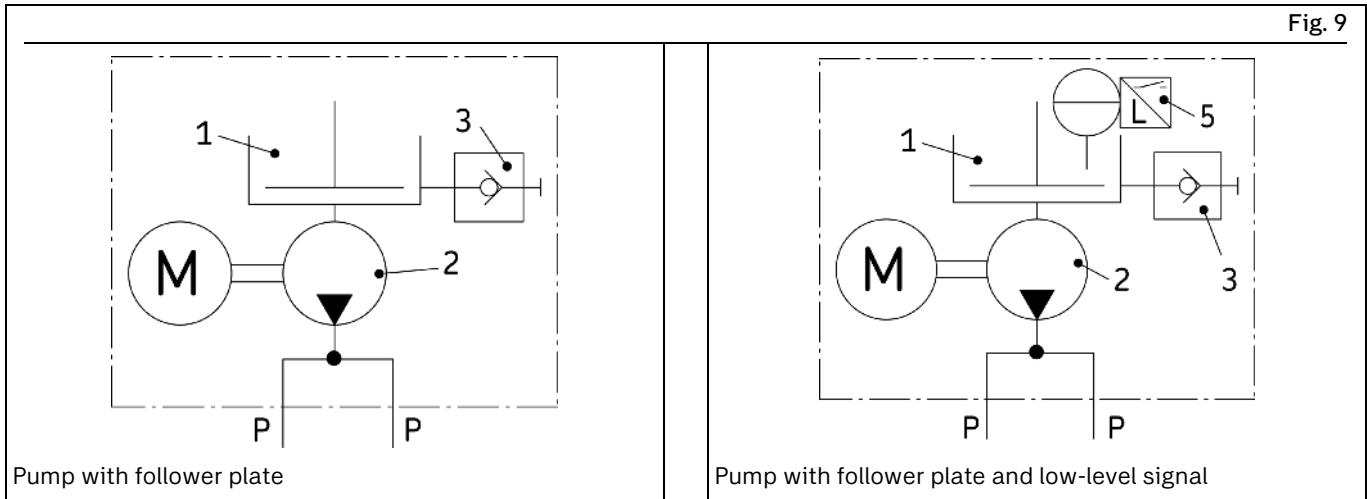Fig. 9



Pump with follower plate

Pump with follower plate and low-level signal



Table 6

Hydraulic connection diagram following ISO 1219-1:2019-01

- 1 = Reservoir
- 2 = Pump
- 3 = Filler fitting

- 5 = Low-level signal
- P = Pressure line

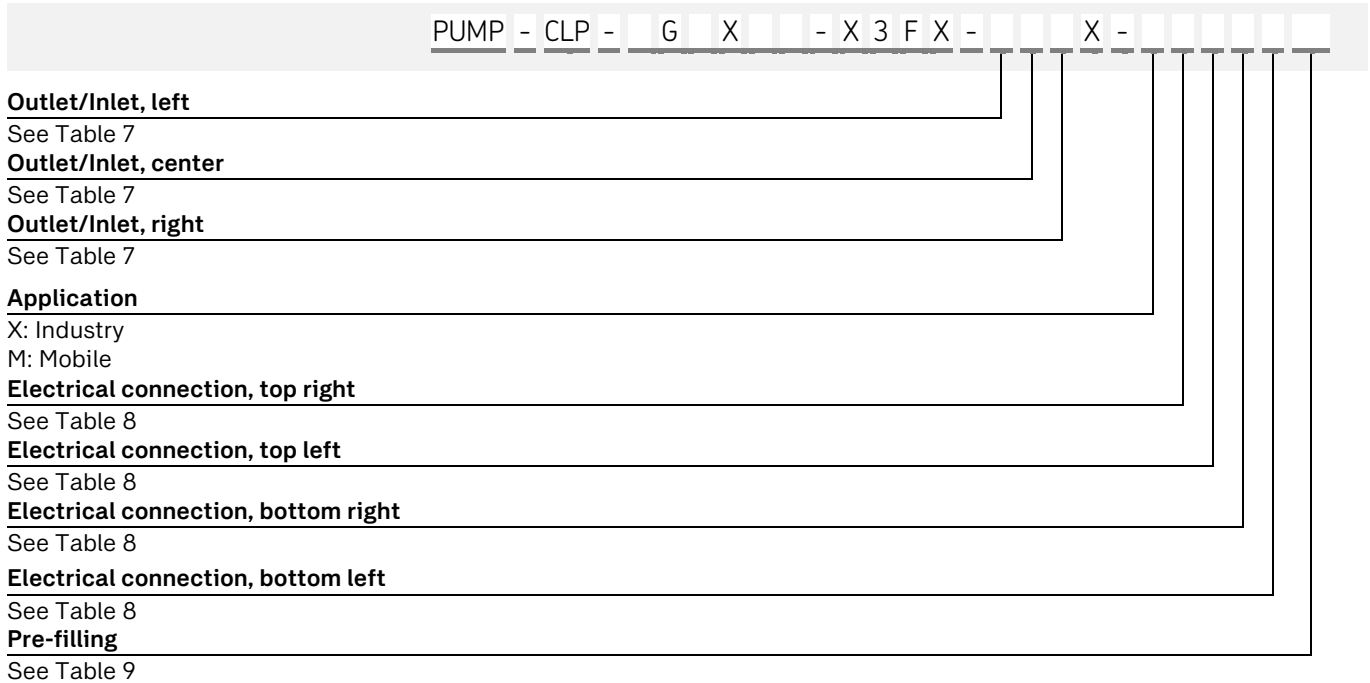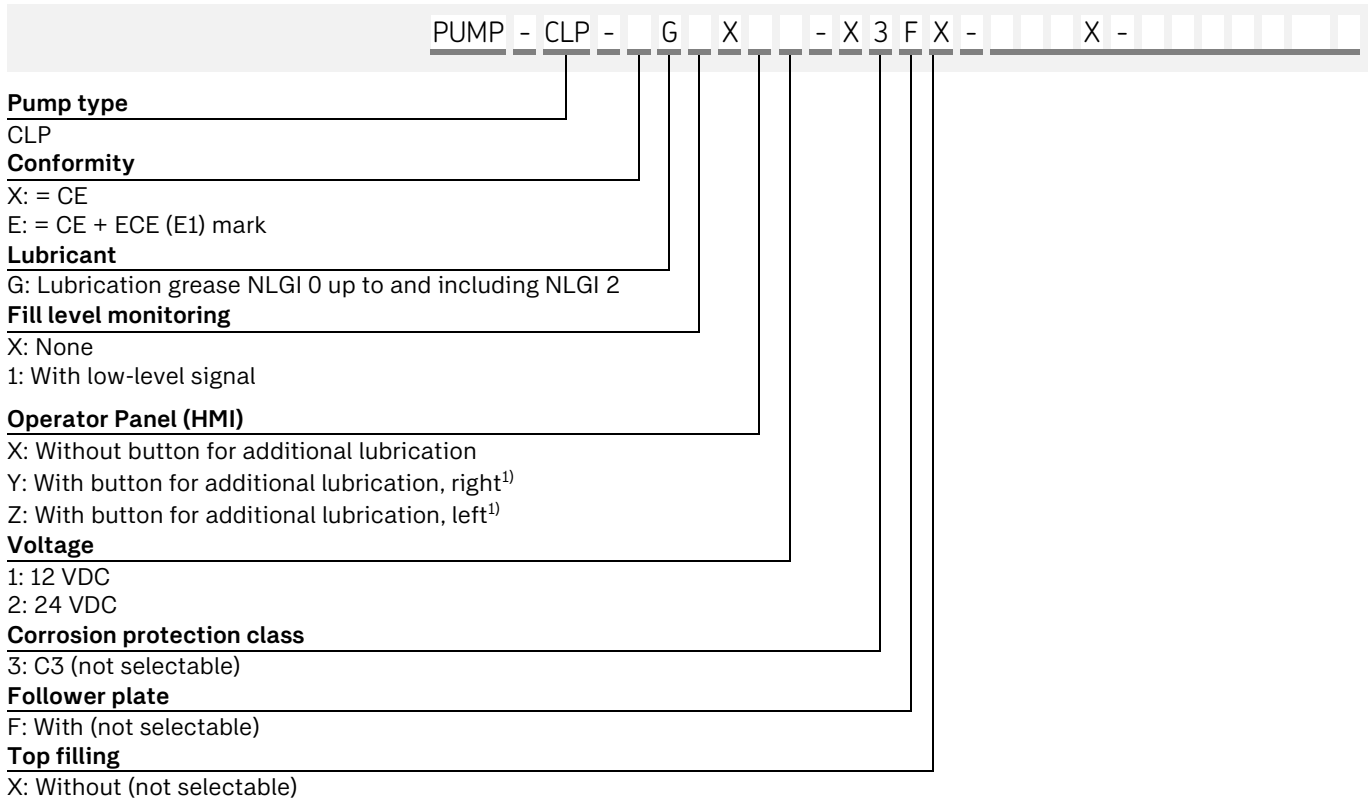4.4 Type identification code



¹⁾ Position only possible opposite the electrical connection (bottom left / bottom right).

Table 7

Outlets/Inlets

Code	Outlet/Inlet	Code	Outlet/Inlet
S	Filler nipple	5	Pump element K5
K	Cartridge filling	6	Pump element K6
Y	Cartridge filling (screw-in, sleeve M26x1.5)	7	Pump element K7
P	Filler coupling (plug-in)	R	Pump element KR (adjustable)
Z	Closed (plug screw)		

Table 8

Electrical connections**Top right / top left**

Code	Connection
X	No connection
A	M12 connector (5-pin, A-coded)

Bottom left / bottom right

Code	Connection
X	No connection
4	Bayonet connector (4-pin)
7	Bayonet connector (7-pin)
W	Rectangular connector (3+PE)

Table 9

Pre-filling

Code	Lubricant	Code	Lubricant
XX	Without lubricant	AB	Aralub HLP 2
FA	SKF LGCC2	L3	Linde heavy-duty grease
KB	Klueberplex BEM 41-141		
ZA	Zeller + Gmelin Divinol Lithogrease G 421		
FV	Fuchs Renolit Duraplex EP2		
RA	Rhenus LDU 02 GR		

5 Delivery, returns, storage

5.1 Delivery

After receipt of the shipment, it must be inspected for any shipping damage and for completeness according to the shipping documents. Immediately inform the transport carrier of any shipping damage. The packaging material must be preserved until any discrepancies are resolved.

5.2 Return shipment

Before return shipment, all contaminated parts must be cleaned. If this is not possible or practical, e.g. if it would impede fault detection in the case of complaints, the medium used must always be specified. In the case of products contaminated with hazardous substances as defined by GHS or CLP regulations, the safety data sheet (SDS) must be sent with the product and the packaging must be labelled in accordance with GHS/CLP. There are no restrictions for land, air, or sea transport. The choice of packaging should be based on the specific product and the stresses to be expected during transport (e.g., necessary anti-corrosion measures in the case of shipment by sea). In the case of wooden packaging, the applicable import regulations and the IPPC standards must be observed. Required certificates must be included in the shipping documents. The following information, as a minimum, must be marked on the packaging of return shipments.



Marking of return shipments

5.3 Storage

The following conditions apply to storage:

- Dry, low-dust, vibration-free, in closed rooms
- No corrosive, aggressive substances at the storage location (e.g., UV rays, ozone)
- Protected against animals (insects, rodents)
- If possible, keep in the original product packaging
- Protected from nearby sources of heat or cold
- In the case of large temperature fluctuations or high humidity, take appropriate measures (e.g., heating) to prevent the condensation of water
- Before usage, check products for damage that may have occurred during storage. This applies in particular to parts made of plastic (due to embrittlement).

5.4 Storage temperature range

For parts not filled with lubricant, the permitted storage temperature is the same as the permitted ambient temperature range (see "Technical data").

5.5 Storage conditions for products filled with lubricant

For products filled with lubricant, the permitted storage temperature range is:

minimum	+ 5 °C	[+41 °F]
maximum	+ 35 °C	[+95 °F]

If the storage temperature range is not maintained, the following steps for replacing the lubricant may not lead to the desired result under certain circumstances.

5.5.1 Storage period up to 6 months

Filled products can be used without implementing additional measures.

5.5.2 Storage period between 6 and 18 months

Pump:

- Connect the pump to a power source
- Switch on the pump and run it until lubricant comes out of every outlet without air bubbles
- Disconnect the pump from the power source
- Remove and dispose of the lubricant that came out

Lines:

- Remove pre-installed lines
- Ensure that both ends of the line are open
- Fill the lines completely with fresh lubricant

Metering devices:

NOTE

Due to the large number of different metering devices, no universally valid statement can be made regarding the removal of the old lubricant and correct bleeding after filling with new lubricant. The instructions can be found in the technical documentation of the specific metering device used.

5.5.3 Storage period more than 18 months

To prevent faults, the manufacturer should be consulted before start-up. The basic procedure for removal of the old lubrication filling corresponds to that for storage periods between 6 and 18 months.

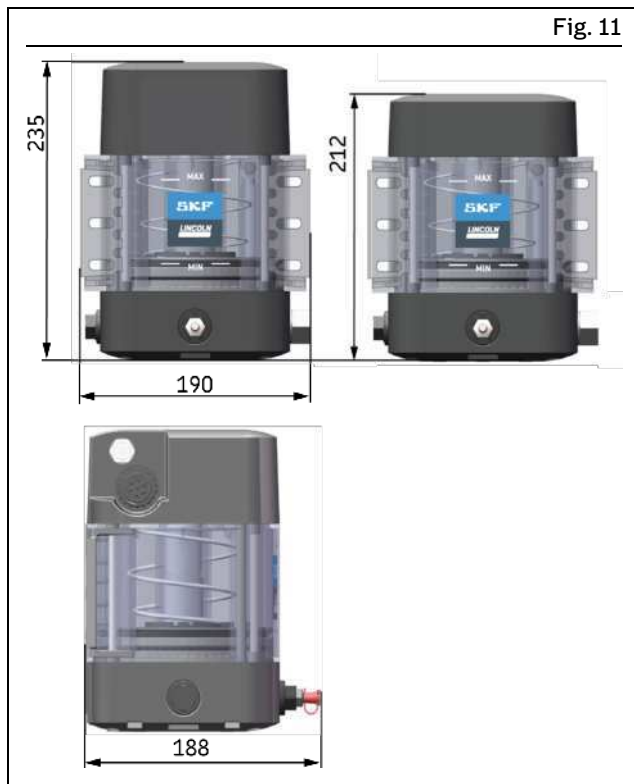
6 Assembly

Observe the safety instructions and the technical data in this manual. Additionally, during assembly pay attention to the following:

- Only qualified and authorized technical personnel may install the products described in this manual.
- Adhere to safety distances and legal prescriptions on assembly and prevention of accidents.
- Possibly existing visual monitoring devices, e.g. pressure gauges, MIN/MAX markings, oil inspection glasses must be clearly visible.
- Protect the product against humidity, dust and vibrations.
- Install the product in an easily accessible position. This facilitates other installations, control and maintenance work.

6.1 Installation dimensions

Ensure sufficient space for maintenance work or for attachment of further components to build a centralized lubrication system to the pump by leaving a free space of at least 100 mm into each direction in addition to the stated dimensions.



Installation dimensions

6.2 Installation bores

NOTICE

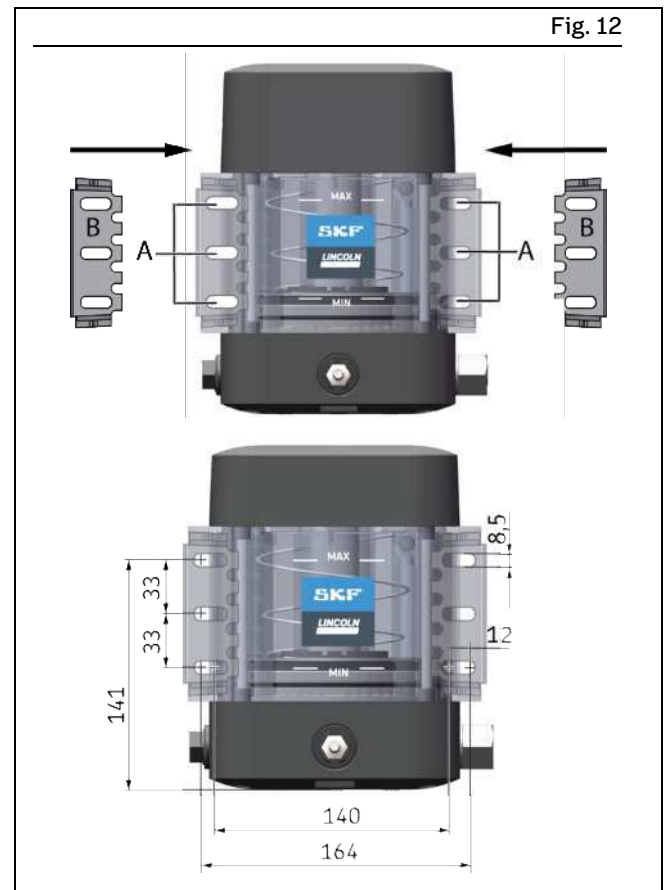
Risk of damage to the superior machine and to the pump

Drill the mounting bores on non-load-bearing parts of the superior machine only. Fastening must not be done on two parts moving against one another (e. g. machine bed and machine assembly). Make sure to use the enclosed mounting brackets and washers for mounting and observe the specified tightening torques.

Fastening is carried out at the fastening points (A) with:

- 2 mounting brackets (B)
- 4 screws M8 (8.8) + 4 washers according to DIN 7349
- if needed, 4 hexagon nuts M8 (8.8) + 4 washers according to DIN 7349

Tightening torque = 10 Nm ± 1.0 Nm



Fastening points

6.3 Setting the delivery rate on pump element R

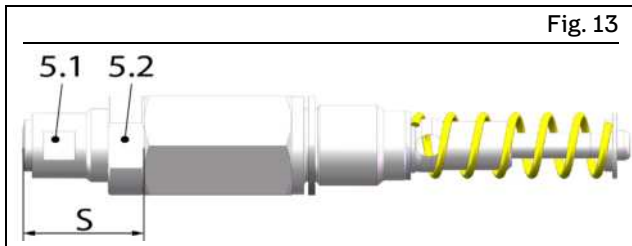
NOTE

The delivery rate of pump element R can be adjusted only when the pump is at a standstill. When delivered, the rate is set to full delivery, meaning the setting dimension is **S = 29 mm [1.14 in.]**.


To set the delivery rate per stroke, proceed as follows:

1. Release the locknut (5.2)
2. Set the delivery rate to the dimension specified in the delivery rate diagram by turning the spindle (5.1).
 - Turning clockwise reduces the delivery rate
 - Turning counterclockwise increases the delivery rate
3. Once the delivery rate is set, tighten the locknut (5.2) again.

Tightening torque = 20 Nm ± 2.0 Nm.



Pump element R

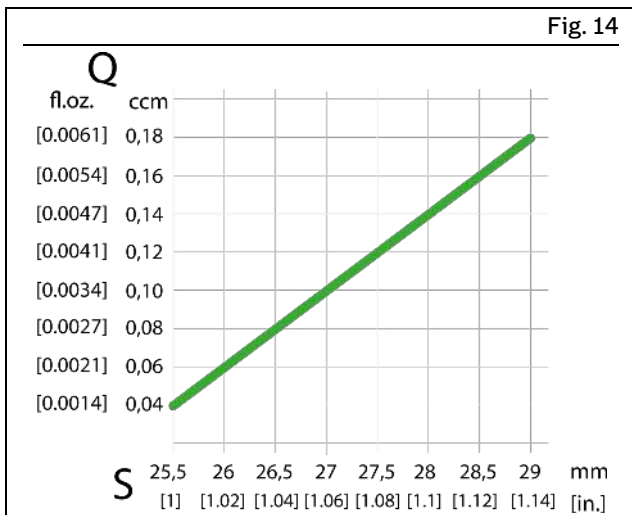

Delivery rate diagram for pump element R per stroke

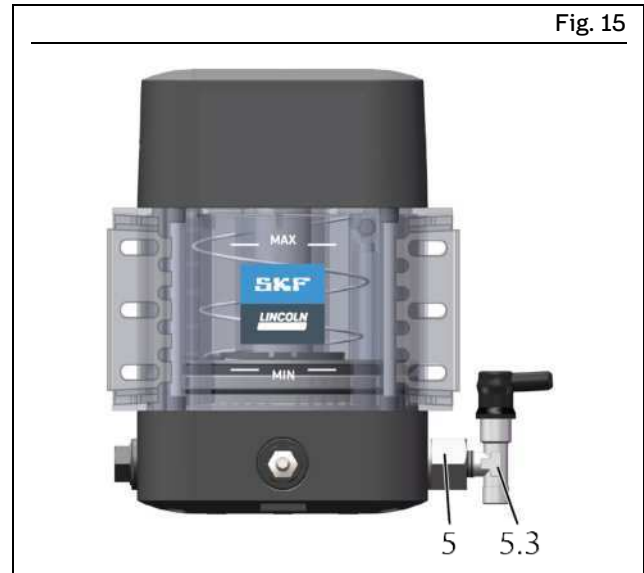
6.4 Mount pressure control valve

Protect each pump element by means of a pressure control valve suitable for the planned maximum admissible operating pressure of the centralized lubrication system. For adequate pressure control valves see the spare parts and accessories in these instructions.

To carry out the assembly proceed as follows:

1. Remove the closure plug from the pump element (5).
2. Screw the pressure control valve (5.3) into the pump element (5). **Tightening torque = 6 Nm -0.5 Nm.**

3. Repeat procedure for each assembled pump element.



Mount pressure control valve

6.5 Connection of the lubrication line

CAUTION



Risk of slipping

Exercise caution when handling lubricants. Immediately remove and bind any leaked lubricants.

NOTICE

Damage to the higher-level machine caused by faulty planning of the centralized lubrication system

All parts for the construction of the centralized lubrication system must be designed for the maximum operating pressure that occurs, the permissible ambient temperature range, the required delivery volume, and the lubricant to be supplied.

Observe the following assembly information for safe and trouble-free operation:

- Generally valid regulations and company regulations regarding the laying of pressurized pipe and hose lines must be observed.
- Use only clean, pre-filled components and lubrication piping.
- Secure every lubricant line on the pump against excessive pressure through the use of a suitable pressure limiting valve (only in the case of pumps without an internal pressure limiting valve).
- The main lubricant line should be routed on a rising gradient and should be able to be bled at the highest point. Lubrication lines should always be arranged so that air inclusions cannot form anywhere.
- Install lubricant metering devices at the end of the main lubricant line such that the outlets of the lubricant metering devices point upwards wherever possible.

- If the system configuration requires that the lubricant metering devices be arranged below the main lubricant line, they should not be placed at the end of the main lubricant line.
- The flow of lubricant should not be impeded by the presence of sharp bends, angle valves, flap valves, seals protruding inward, or changes in cross-section (large to small). Unavoidable changes in the cross-section in lubrication lines must have smooth transitions.
- Connect the lubricant lines in such a way that no mechanical forces are transferred to the product (stress-free connection).
- Lubrication piping is to be positioned in such a way that they cannot become kinked, pinched or frayed.

6.6 Electrical connection

⚠ WARNING

Electric shock
Work on electrical components may be performed only by qualified electricians.

At a minimum, the following safety measures must be taken before any work on electrical components is done:

- Isolate, lock and tag out
- Check to ensure the absence of voltage
- Ground and short-circuit the product
- Cover any live parts in the surrounding area

Observe the following instructions for a safe connection:

- The electrical connection must be implemented in accordance with the specifications of the standards of the DIN VDE 0100 series or of the standards of the IEC 60364 series, respectively
- Connect the electrical lines in such a way that no mechanical forces are transferred to the product
- The pump must be secured with a suitable external fuse (see terminal diagram)

The electrical connection is established in accordance with the type of connection of the specific pump.

1. Assemble the required cables in accordance with the respective connection diagram or use preassembled cables for the connection.
2. Connect plugs with their respective bushes and secure them against becoming loose using the type of securing method specified for the quick disconnect couplings. Only this way is a safe connection and compliance with the enclosure rating secured.

NOTE

Connect the cables in such a way that no tensile forces can be transferred to the product.

7 First start-up

In order to warrant safety and function, a person assigned by the operator must carry out the following inspections. Immediately eliminate detected deficiencies. Deficiencies may be remedied by an authorized and qualified specialist only.

Chart 1

7.1 Inspections prior to initial start-up

	YES	NO
Electrical connection carried out correctly	<input type="checkbox"/>	<input type="checkbox"/>
Mechanical connection carried out correctly	<input type="checkbox"/>	<input type="checkbox"/>
The performance data of the previously indicated connections correspond to the specifications stated in the Technical data	<input type="checkbox"/>	<input type="checkbox"/>
All components, such as lubrication lines and metering devices, have been correctly installed	<input type="checkbox"/>	<input type="checkbox"/>
Product protected with adequate pressure control valve	<input type="checkbox"/>	<input type="checkbox"/>
No visible damage, contamination and corrosion	<input type="checkbox"/>	<input type="checkbox"/>
Any dismantled protection and monitoring equipment has been reassembled and checked for correct function	<input type="checkbox"/>	<input type="checkbox"/>
All safety-relevant markings on the product are available and in proper condition	<input type="checkbox"/>	<input type="checkbox"/>

7.2 Inspections during initial start-up

No unusual noises, vibrations, accumulation of moisture, or odours present	<input type="checkbox"/>	<input type="checkbox"/>
No unwanted escape of lubricant (leakages) from connections	<input type="checkbox"/>	<input type="checkbox"/>
Lubricant is supplied free from bubbles	<input type="checkbox"/>	<input type="checkbox"/>
Bearings and friction points are provided with the planned amount of lubricant	<input type="checkbox"/>	<input type="checkbox"/>

7.3 Triggering additional lubrication

NOTE

An additional lubrication can be triggered only during the pump's interval time.

NOTICE

Possible damage to the main machine due to underlubrication.


Additional lubrication should continue until the metering device farthest from the pump has dispensed one complete dose of lubricant. This is the only way to ensure that all the lubrication points are supplied with additional lubricant.

To trigger additional lubrication, proceed as follows:

7.3.1 Pumps without control but with optional button for additional lubrication

1. Press the optional button for additional lubrication (**14**).
The additional lubrication is carried out for as long as the button is pressed. The button is located on the upper part of the pump housing, on the right or the left.

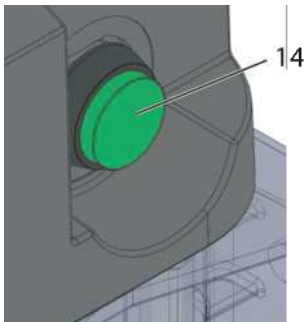Fig. 16



Button for additional lubrication

NOTE

An additional lubrication can be triggered only during the pump's interval time.

7.3.2 Pumps without control and without optional button for additional lubrication

7.3.2.1 Additional lubrication on pumps without control

To trigger additional lubrication on pumps without control, please refer to the documentation for the main machine/the control of that machine.

7.4 Acknowledge receipt of a fault indication

Please see the documentation of the superior machine or machine controller, if you want to acknowledge receipt of a fault in case of pumps without internal controller but with filling-level monitoring.

8 Operation

SKF products operate largely automatically.

The activities required during normal operation are limited primarily to checking the pump for damage and proper functioning.

NOTICE

Possible damage to the pump and air in the lubrication system

In the case of pumps without a low-level signal, the fill level must be checked regularly and topped up with lubricant in good time.

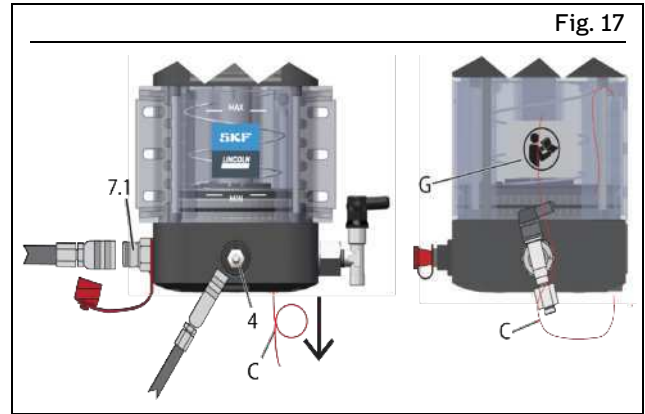
8.1 Initial filling of a pump delivered without lubricant

NOTE

For initial filling of a pump delivered without lubricant, the pump is fitted with a bleed thread (C) and a "Read instructions" sticker (G). The bleed thread ensures that the air under the follower plate can escape when filling the pump for the first time. This prevents faults due to negative effects on the suction characteristics of the pump resulting from air inclusions under the follower plate. The bleed thread (C) is **ONLY** required for the initial filling and must then be removed together with the "Read instructions" sticker (G).

When filling for the first time, proceed as described below:


1. Align the pump so that it is upright.
2. Connect a filling pump to the fill connection (7.1) or filler nipple (4).
3. Switch on the filling pump and carefully fill the space under the follower plate completely with lubricant, while observing the follower plate.
4. Switch off the filling pump once all the air under the follower plate has been displaced.
5. Detach the sticker (G) and slowly and carefully pull the bleed thread (C) down and out of the pump.
6. Switch on the filling pump and fill the reservoir with lubricant up to just below the - MAX - marking.
7. Properly dispose of the bleed thread (C) and the sticker (G).



Initial filling of a pump delivered empty

8.2 Regular filling with a transfer pump

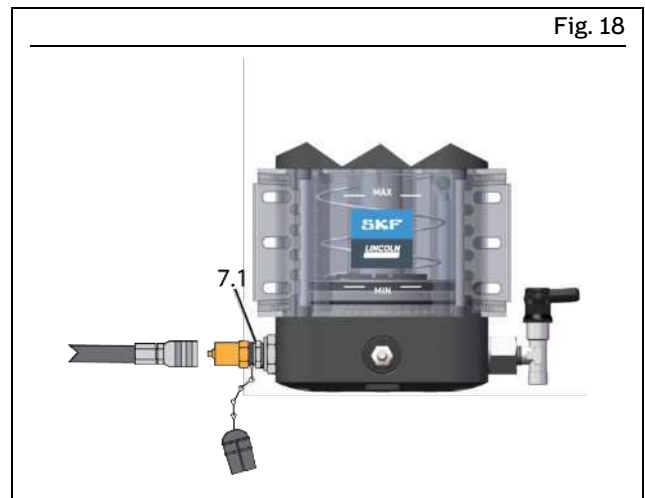
1. Connect the filling pump to the fill connection (7.1).
2. Switch on the filling pump and fill the reservoir up to just below the - MAX - marking.
3. Switch off the filling pump and detach it from the fill connection (7.1) of the pump.
4. Screw the protective cap back onto the fill connection (7.1) of the pump.



Regular filling with transfer pump

8.3 Regular filling with cartridge

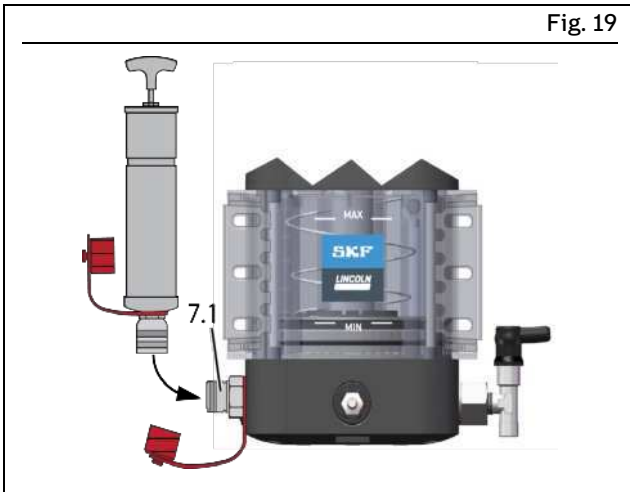
1. Connect the cartridge to the fill connection (7.1).
2. the reservoir up to just below the - MAX - marking.
3. Detach the cartridge from the fill connection (7.1) of the pump.
4. Screw the protective caps back onto the cartridge and the fill connection (7.1) of the pump.



Regular filling with cartridge

8.4 Regular filling via the filler nipple

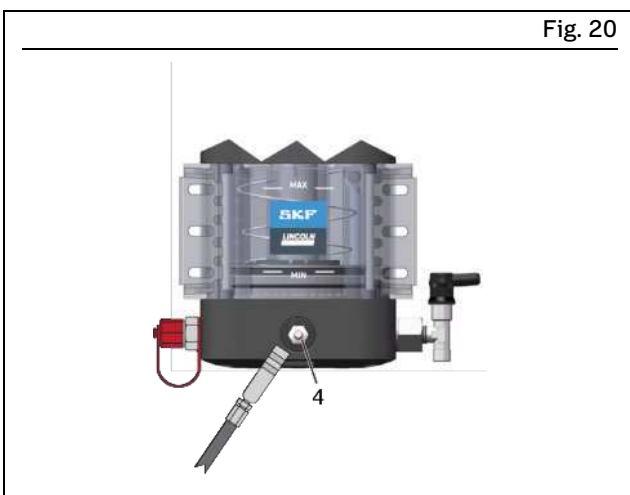1. Connect the fill connection of the filling pump to the filler nipple (4).
2. Switch on the filling pump and fill the reservoir up to just below the - MAX - marking.
3. Switch off the filling pump and disconnect it from the filler nipple (4) of the pump.
4. the protective cap back on the filler nipple of the pump.



Regular filling with filler nipple

9 Maintenance

9.1 Maintenance

Regular and appropriate maintenance is a prerequisite to detect and clear faults in time. The specific time lines have to be determined, verified at regular intervals and adapted, if necessary, by the operator based on the operating conditions. If needed, copy the table for regular maintenance activities.

Checklist Maintenance Table 10		
Activity to be done	YES	NO
Electrical connection carried out correctly	<input type="checkbox"/>	<input type="checkbox"/>
Mechanical connection carried out correctly	<input type="checkbox"/>	<input type="checkbox"/>
The performance data of the previously indicated connections correspond to the specifications stated in the Technical data	<input type="checkbox"/>	<input type="checkbox"/>
All components, such as lubrication lines and metering devices, have been correctly installed	<input type="checkbox"/>	<input type="checkbox"/>
Product protected with adequate pressure control valve	<input type="checkbox"/>	<input type="checkbox"/>
No visible damage, contamination and corrosion	<input type="checkbox"/>	<input type="checkbox"/>
Any dismantled protection and monitoring equipment has been reassembled and checked for correct function	<input type="checkbox"/>	<input type="checkbox"/>
Any warning labels on the product are present and in proper condition	<input type="checkbox"/>	<input type="checkbox"/>
No unusual noises, vibrations, accumulation of moisture, or odours present	<input type="checkbox"/>	<input type="checkbox"/>
No unwanted escape of lubricant (leakages) from connections	<input type="checkbox"/>	<input type="checkbox"/>
Lubricant is supplied free from bubbles	<input type="checkbox"/>	<input type="checkbox"/>
Bearings and friction points are provided with the planned amount of lubricant	<input type="checkbox"/>	<input type="checkbox"/>

10 Cleaning

10.1 Basics

Cleaning should be carried out in accordance with the operator's own company rules, and cleaning agents and devices and the personal protective equipment to be used should likewise be selected in accordance with those rules. Only cleaning agents compatible with the materials may be used for cleaning. Completely remove any cleaning agent residue left on the product and rinse with clear water. Unauthorized persons must be kept away. Use signage to indicate wet areas.

10.2 Interior cleaning

The interior normally does not need to be cleaned. The interior of the product must be cleaned if incorrect or contaminated lubricant accidentally enters the product. Please contact our Service department.

10.3 Exterior cleaning

Do not allow any cleaning fluid to enter the interior of the product during cleaning.

⚠ WARNING



Risk of fatal electric shock



Cleaning work may only be performed on products that have been de-energized first. When cleaning electrical components, be mindful of the IP enclosure rating.

⚠ WARNING



Serious injury from contact with or inhalation of hazardous substances



Wear personal protective equipment. Observe the safety data sheet (SDS) of the hazardous substance. Avoid contaminating other objects or the environment during cleaning.



10.4 Cleaning the vent pipe

NOTE

The vent pipe is an option that cannot be selected in SKF's online product customization tool, and it is not present in all pumps.

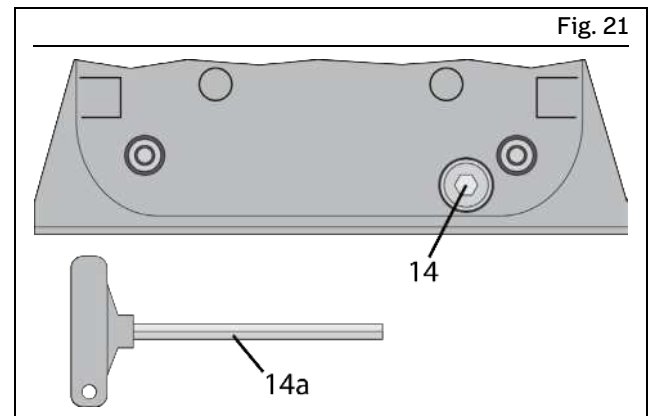
The easy-to-clean vent pipe can be ordered separately (see Spare Parts). The use of the vent pipe is recommended if the CLx pump is used in dirty surroundings or if there is a risk that vermin could nest in it (e.g. in agriculture).

If the vent pipe has to be cleaned due to clogging (e.g. grease deposits), proceed as described below:

1. Remove the vent pipe (14) from the underside of the pump housing using a hex key (WAF 6) (14a).
2. Remove the clogging from the vent pipe using a suitably thin tool and possibly also compressed air.
3. Screw the vent pipe (14) back into the pump housing using the hex key (14a).

Tightening torque:

3 Nm ± 1.0 Nm.



Cleaning the vent pipe

11 Faults, causes, and remedies

Table 11

Fault table

Fault	Possible cause	Remedy
Pump does not run	<ul style="list-style-type: none"> • Power supply to the pump is interrupted <ul style="list-style-type: none"> – Superior machine is switched off – Connection cable of pump is loose or defective – External fuse is defective • Pump is in the pause time mode • Pump motor is defective • Internal cable break 	
Pump runs, but does not supply lubricant or supplies an insufficient amount of lubricant.	<ul style="list-style-type: none"> • Blockade, fault within the centralized lubrication system • Defective check valve • Defective pressure relief valve • Suction bore of a pump element is clogged • Pump element R wrongly adjusted. • Air pockets in the lubricant/under the follower plate • Too high lubricant consistency (at low temperatures) • Too low lubricant consistency (at high temperatures) • Wrong configuration of metering device within the centralized lubrication system • Wrong setting of pump lubrication time and pause time on the superior machine control. 	<ul style="list-style-type: none"> • Check whether one of the indicated faults is present and remedy it in the frame of responsibilities. • Faults outside of your own responsibility have to be reported to your superior to initiate further measures. • If the fault cannot be determined and remedied, please contact our Customer Service.

12 Repairs

⚠ WARNING

Risk of injury
At a minimum, the following safety measures must be taken before any repairs:

- Unauthorized persons must be kept away
- Mark and secure the work area
- Depressurize the product
- Isolate the product, and lock and tag it out
- Check to ensure live voltage is no longer present
- Ground and short-circuit the product
- Cover any adjacent live parts.

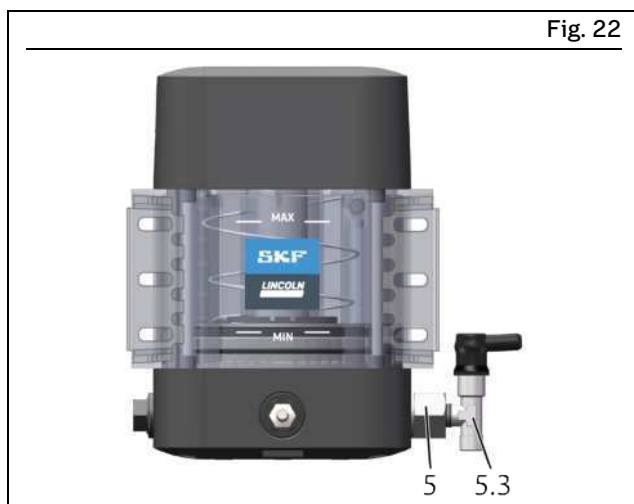
12.1 Replace pump element and pressure control valve

NOTE

The characteristics of the new parts must correspond to the characteristics of the parts to be replaced.

To replace a pump element, proceed as follows:

1. Unscrew the defective pump element (5) at its hexagon out of the pump housing together with the pressure control valve (5.3). Remove the old seal of the pump element on the pump housing, if necessary.
2. Screw a new pump element (5) into the pump housing together with a new gasket.
– **Tightening torque 20 Nm + 2.0 Nm.**
3. Then screw a new pressure control valve (5.3) into the pump element (5).
– **Tightening torque 6 Nm - 0.5 Nm.**



Check pump element and replace pressure control valve.

13 Shutdown, disposal

13.1 Temporary shutdown

Temporary shutdowns should be done by a course of action to be defined by the operator.

13.2 Permanent shutdown, disassembly

Permanent shutdown and disassembly of the product must be planned properly by the operator and conducted in compliance with all applicable laws and regulations.

13.3 Disposal

The waste producer/operator must dispose of the various types of waste in accordance with the applicable laws and regulations of the country in question.


14 Spare parts and accessories

Spare parts may be used exclusively for replacement of identical defective parts. Modifications with spare parts on existing products are not allowed.

Accessories are used to extend, supplement the functional range or to assemble the product.

Table 12


14.1 Pump elements

Designation	Qty.	Part number	Fig.
Pump element 5 including gasket C3 version	1	600-26875-2	
Pump element 6 including gasket C3 version	1	600-26876-2	
Pump element 7 including gasket C3 version	1	600-26877-2	
Pump element R including gasket C3 version	1	655-28716-1	

Output volumes see chapter Technical data.

Table 13

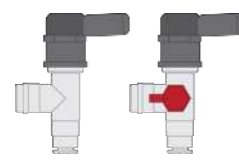14.2 Pressure control valves 270 bar, plug-in type for tube Ø 6

Designation	Qty.	Part number	Fig.
SVTSV-270-R1/4-1/8 NPTFI-NIPOOR-A	1	270864	
SVTSV-270-R1/4-6	1	624-29036-1	
SVTSV-270-R1/4-6 NIPOOL	1	624-77803-1	
SVTSV-270-R1/4-6 NIPOOR	1	624-77802-1	


Legend:

NIPOOL = Lubrication fitting left-side, NIPOOR = lubrication fitting right-side

NPTFI = self-sealing tapered pipe thread (female)

Table 14

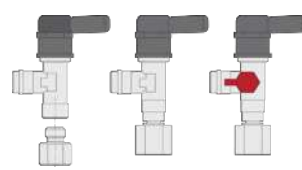14.3 Pressure control valves 270 bar, screw-in type for tube Ø 6

Designation	Qty.	Part number	Fig.
SVTS-270-R1/4-D 6	1	624-28892-1	
SVTS-270-R1/4-6 NIPOOL	1	624-77810-1	
SVTS-270-R1/4-6 NIPOOR	1	624-77813-1	
SVTS-270-R1/4-D 6 W/O.M+D	1	624-36481-1	
Adapter kit M14x1.5 lxM12x1.5A including gasket for 624-36481-1	1	5240-00000005	

Legend:

NIPOOL = Lubrication fitting left-side, NIPOOR = lubrication fitting right-side

Table 15

14.4 Adapter with filler nipple

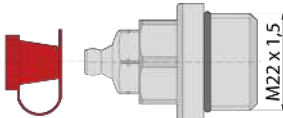
Designation	Pcs.	Item number	Figure
Adapter with filler nipple ST 1/4 acc. to NPTF, incl. seal	1	519-33840-1	
Adapter with filler nipple A2 AR 1/4, incl. seal	1	519-33959-1	
Adapter with filler nipple ST AR 1/4, incl. seal	1	519-33955-1	
Protective cap for filler nipple (red)	1	898-210-050	

Table 16

14.5 Closure screw

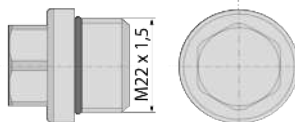
Designation	Qty.	Part number	Fig.
Cap screw M22x 1.5 including gasket to close unneeded outlets	1	519-60445-1	

Table 17

14.6 Grease port, plug-in



Designation	Pcs.	Item number	Figure
Optional grease port with nipple for quick-release coupling, for filling with lubricant from below via the lower part of the housing (without filter).	1	995-000-870	


Table 18

14.7 Fill connection, pivoted

Designation	Pcs.	Item number	Figure
Optional fill connection with nipple for quick-release coupling, for filling with lubricant from below via the lower part of the housing (without filter).	1	5590-0000026	

14.8 Grease port, plug-in

Designation	Pcs.	Item number	Figure
Optional grease port for filling with lubrication grease from below via the lower part of the housing	1	5590-0000002	

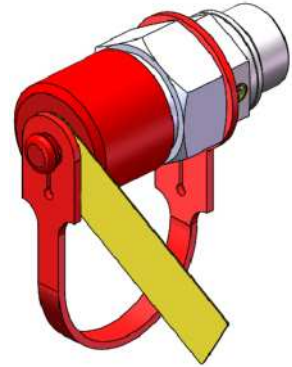

14.9 Filling connection, screwable

Designation	Qty.	Part number	Fig.
Optional filling connection for filling with lubrication grease from the bottom via the lower housing part (connection sleeve M22x1.5)	1	538-36763-1	

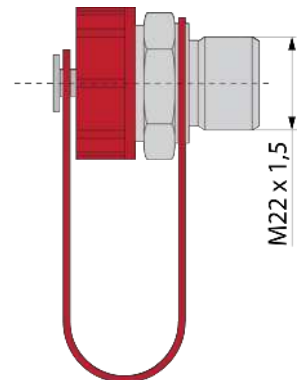


Table 21

14.10 Grease port with lubricant return

Designation	Pcs.	Item number	Figure
Optional grease port for filling with lubricant from below via the lower part of the housing, with R1/4 grease fitting to DIN 71412 and lubricant return via compression connector to DIN 2353-L for Ø 6 mm pipes.	1	995-997-300	

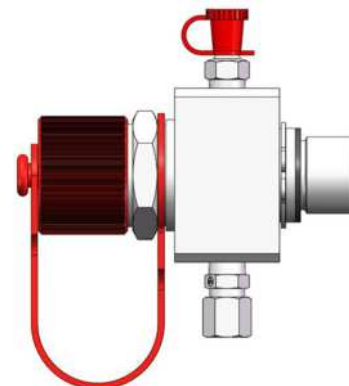


Table 22

14.11 Grease port without lubricant return

Designation	Pcs.	Item number	Figure
Optional grease port for filling with lubricant from below via the lower part of the housing, with R1/4 grease fitting to DIN 71412.	1	995-997-301	

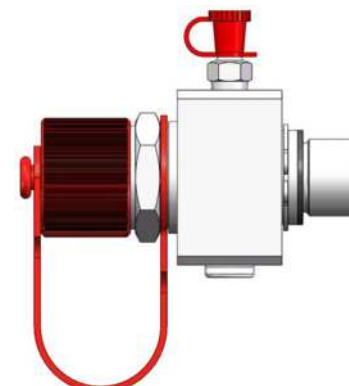


Table 23

14.12 Vent pipe assy

Designation	Pcs.	Item number	Figure
Vent pipe assy, for aeration and bleeding of reservoirs for CLx pumps	1	5590-00000014	



Table 24

14.13 Mounting brackets


Designation	Qty.	Part number	Fig.
Mounting brackets	1	5590-00000015	
Consisting of: 2 x Mounting bracket 4 x Washer 8.4 DIN 7349			

Table 25

14.14 Power lead





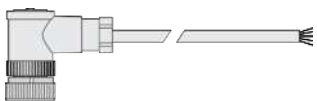


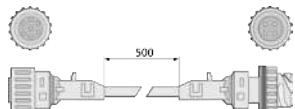
Designation	Pcs.	Item number	Figure
Power lead 10 m with bayonet connector (4/2-pin)	1	664-34167-9	
Power lead 10 m with bayonet connector (7/5-pin)	1	664-34428-3	
Power lead 10 m with rectangular connector, junction box (black)	1	664-36078-7	
Power lead 5 m with M12x1 connector, straight (A-coded)	1	179-990-600	
Power lead 5 m with M12x1 connector, 90° angled (A-coded)	1	179-990-601	
M12x1 connector, straight (A-coded)	1	179-990-371	
M12x1 connector, 90° angled (A-coded)	1	179-990-372	

Table 26

14.15 Adapter cable

Designation	Pcs.	Item number	Figure
Adapter cable 0.5 m with bayonet socket, 7-pin, and bayonet connector, 4-pin, to connect to a CLP Basic pump to the signal line of a KFA pump that is being replaced.	1	6640-00000068	

15 Appendix

15.1 Connection diagrams

Table 27

Cable colors in accordance with IEC 60757

Abbreviation	Color	Abbreviation	Color	Abbreviation	Color	Abbreviation	Color
BK	Black	GN	Green	WH	White	PK	Pink
BN	Brown	YE	Yellow	OG	Orange	TQ	Turquoise
BU	Blue	RD	Red	VT	Violet	GY	Gray
GNYE	Green/Yellow	RDWH	Red/White	GD	Gold	SR	Silver































Not all cable colors need to be used in the terminal diagrams.

NOTE

Not all terms and symbols have to be included in every terminal diagram. If there is more than one terminal diagram in a manual, you can tell which pump variant a diagram is for by looking at the details of the type identification code specified on each terminal diagram. You can find the type identification code in the manual in the Technical Data chapter.






Table 28

Key to terminal diagram

LL	Low-level signal	M	Motor	F	Fuse
LLW	Low-level pre-warning	NC	Normally closed contact	PCB	Printed circuit board
HL	Full signal (high level)	NO	Normally open contact	n.c.	Not connected
HLW	High-level pre-warning	SLZ	Fault/good signal	30	Positive pole/voltage (battery)
HLA	High-level alarm (too full)	CS+	Cycle switch +	31	Negative pole/ground (battery)
MC/15	Machine contact/ignition	CS-	Cycle switch -	54	Brake light power (trailer)
Err	Fault/good signal	P	Pressure switch	DK	Pushbutton for additional lubri-
BG+	Piston detector +	N	Neutral conductor	WS	Fill level warning switch
BG-	Piston detector -			PE	Protective ground/neutral
BGS	Piston detector signal				
	Socket		Power supply unit		Customer's control unit
	Socket with ground contact		Fuse		Equipotential bonding
	Plug		Load, resistor		Bluetooth
	Additional lubrication		Low-level signal		Antenna
	Piston detector / proximity switch		Motor AC		Zero potential (housing)
	NC contact		Motor DC		Ground
	NO contact		Diode		Protective ground (PE)
	Button		LED		Functional ground
	Lamp		Battery		
	Button with lamp		Battery isolator switch		
	Housing		Jumper		

15.2 Overview of cables and possible connections

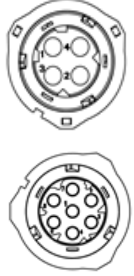Table 29

Plug	Color	Pin	Item number	Length	Cross-section	Enclosure rating
 Bayonet, 7-pin A-coded	RD	1	664-34428-3	10 m	7 x 1.5 mm ²	IP69K
	BN	2				
	BK	3				
	WH	4				
	YE	5				
	BU	6				
	GN	7				
 Bayonet, 4-pin A-coded	RD/YE	1	664-34167-9	10 m	4 x 0.5 mm ²	IP69K
	BN/YE	2				
	WH/RD	3				
	WH/BN	4				
 Rectangular connector 3 + PE	RD	1	664-36078-7	10 m	4 x 0.5 mm ²	IP65
	BN	2				
	BK	3				
	YE/GN	PE				
 M12x1 A-coded	BN	1	179-990-600	5 m	4 x 0.34 mm ²	IP67
	WH	2	179-990-601	5 m	4 x 0.34 mm ²	IP67
	BU	3	179-990-371	---	Max. 4 x 0.75 mm ²	IP67
	BK	4	179-990-372	---	Max. 4 x 0.75 mm ²	IP67
 Adapter cable*	RD	1	6640-00000068	0.5 m	4 x 1.5 mm ²	IP 67
	BN	2				
	BK	3				
	WH	4				
	---	5				
	---	6				
	---	7				

*Adapter cable 0.5 m with bayonet socket, 7-pin, and bayonet connector, 4-pin, to connect a CLP Basic pump to the signal line of a KFA pump that is being replaced.

15.3 CL_-__1XY/Z_-X_FX-__X-MXX(7)(7)_

NOTE


For the meaning of each detail of the type identification code, see the type identification code in this manual. The actual type identification code details of your pump can be found on the type plate on the pump.

Table 30

Terminal diagram valid for pumps with the following equipment features

- ✓ 7-pin bayonet connector
- ✓ 12 or 24 VDC
- ✓ Button for additional lubrication
- ✓ Mobile applications
- ✓ Low-level signal

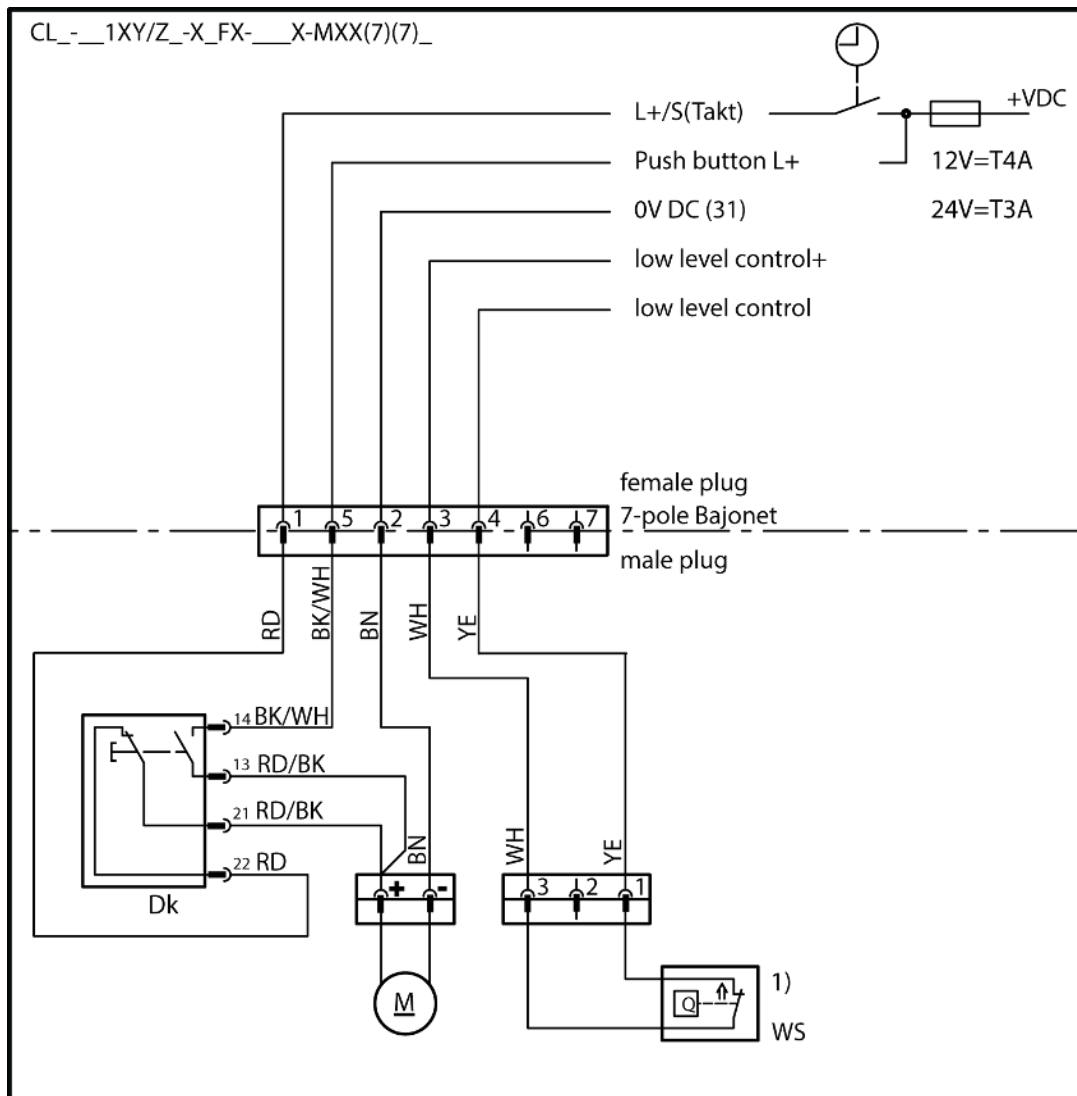Fig. 23



1) Contact opens at minimum fill level


15.4 CL_-__1XY/Z_-X_FX-__X-M(A)(A)(7)(7)_

Table 31

Terminal diagram valid for pumps with the following equipment features

- ✓ 7-pin bayonet connector
- ✓ 4-pin M12 connector (A-coded)
- ✓ Button for additional lubrication
- ✓ 12 or 24 VDC
- ✓ Low-level signal
- ✓ Mobile applications

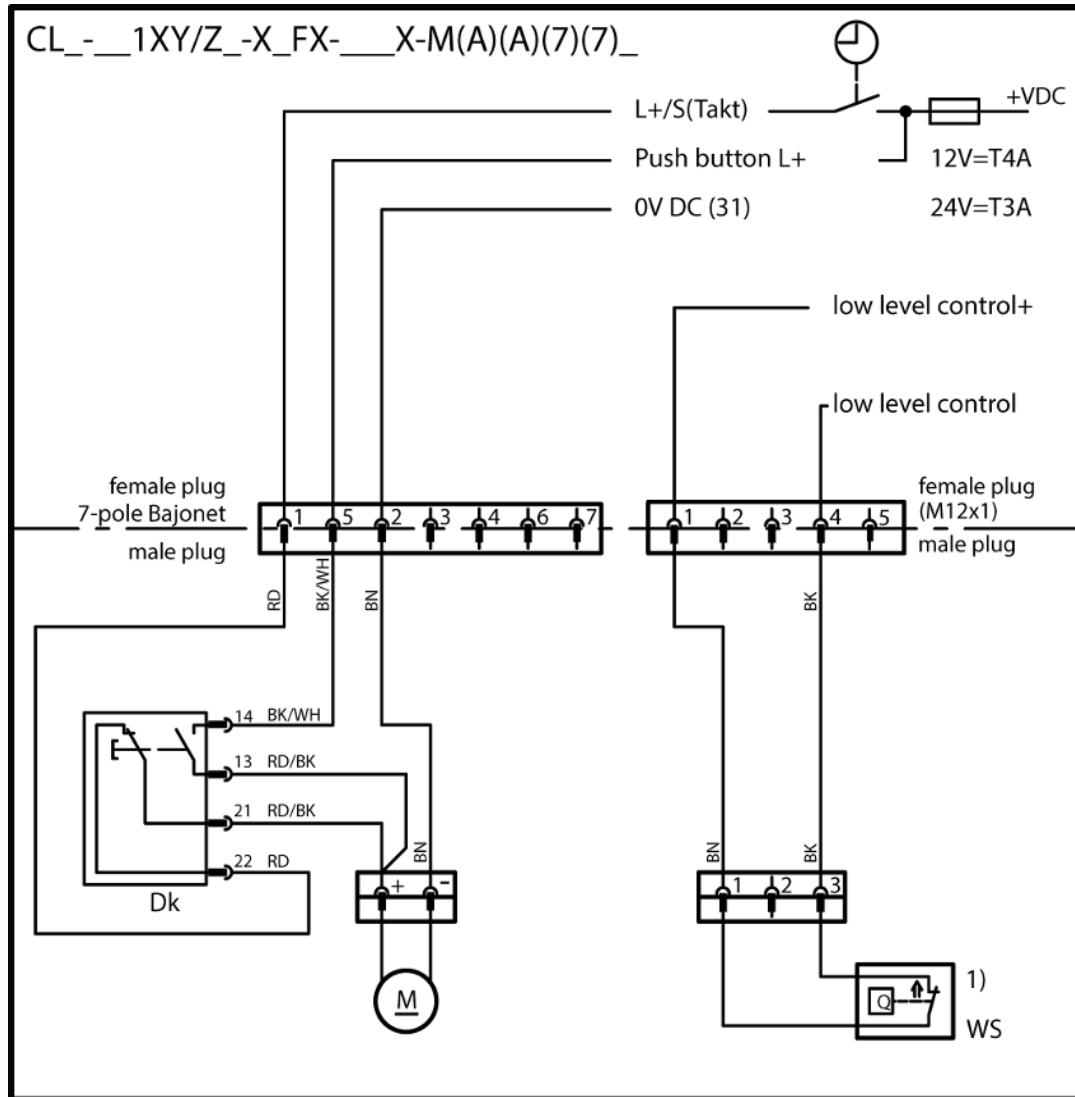Fig. 24



1) Contact opens at minimum fill level


15.5 CL_-__1XX_-X_FX-__X-MXX(7)(7)_

Table 32

Terminal diagram valid for pumps with the following equipment features

- ✓ 7-pin bayonet connector
- ✓ Low-level signal
- ✓ 12 or 24 VDC
- ✓ Mobile applications

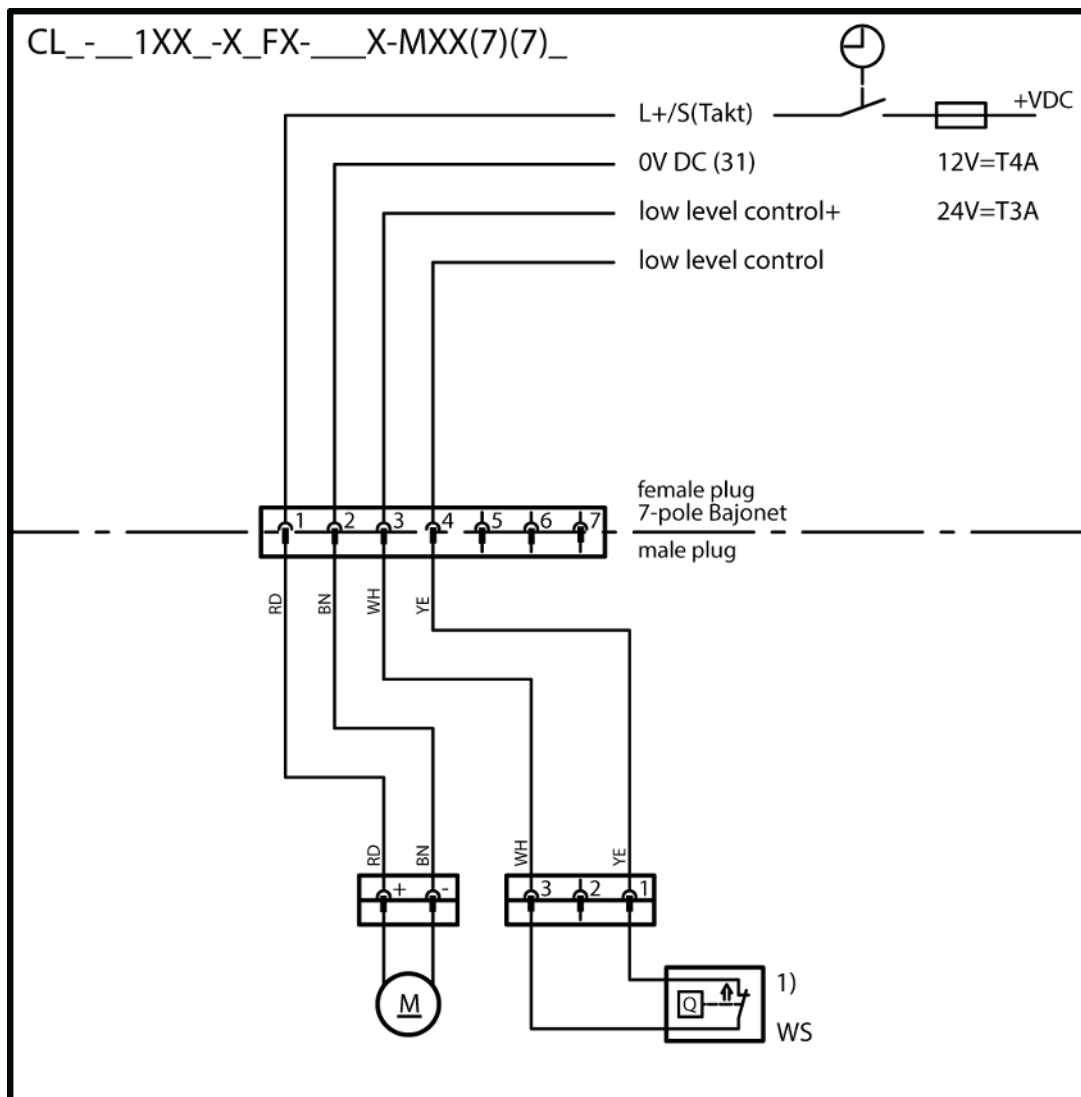Fig. 25



1) Contact opens at minimum fill level


15.6 CL_-__1XX_-X_FX-__X-M(A)(A)(4)(4)_

Table 33

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x 4-pin M12 connector (A-coded)
- ✓ Low-level signal
- ✓ 12 or 24 VDC
- ✓ 1 x 4-pin bayonet connector
- ✓ Mobile applications

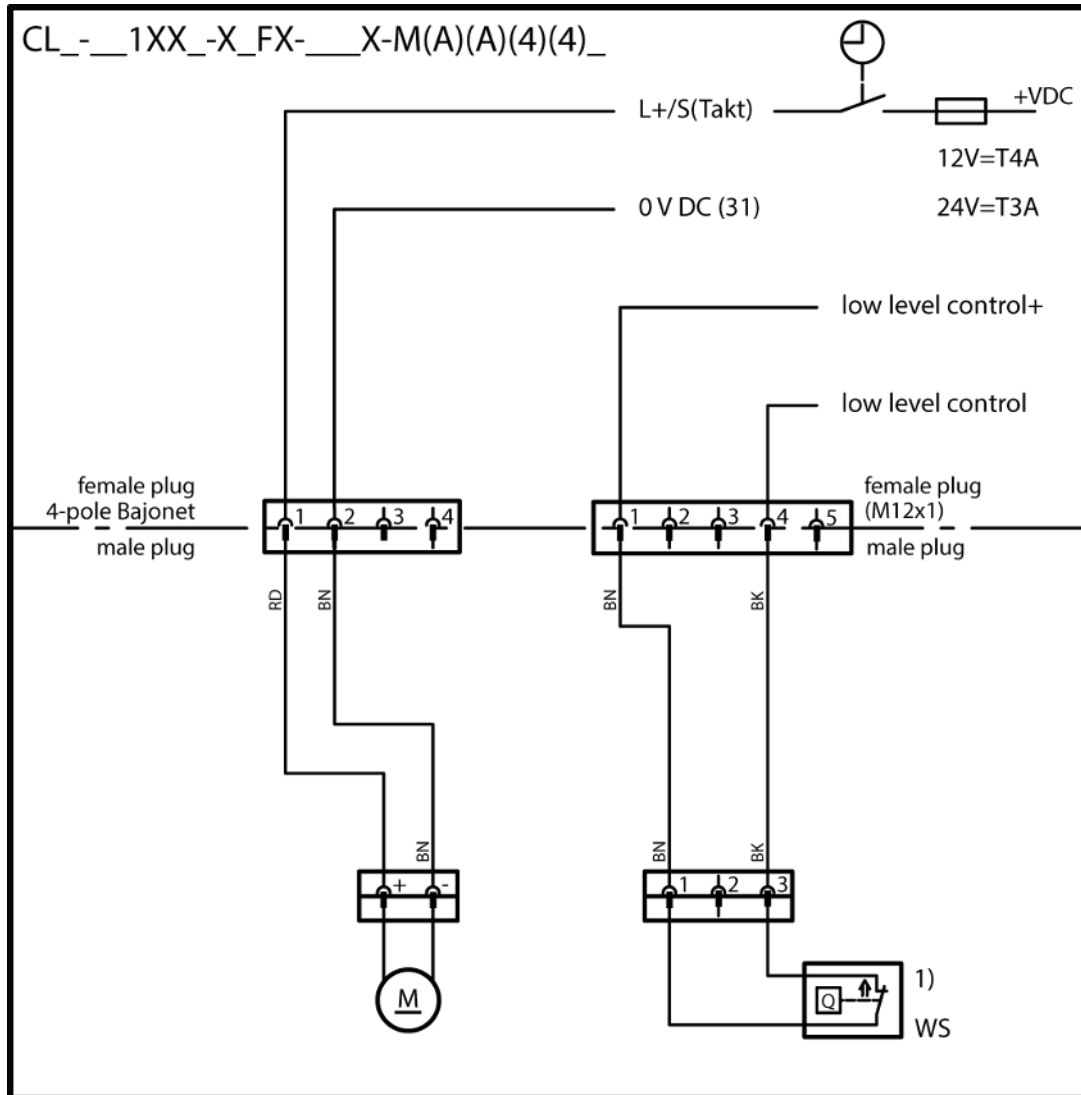Fig. 26



1) Contact opens at minimum fill level


15.7 CL_-__XXY/Z_-X__-__X-MXX(7)(7)_

Table 34

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x 7-pin bayonet connector
- ✓ Button for additional lubrication
- ✓ 12 or 24 VDC
- ✓ Mobile applications

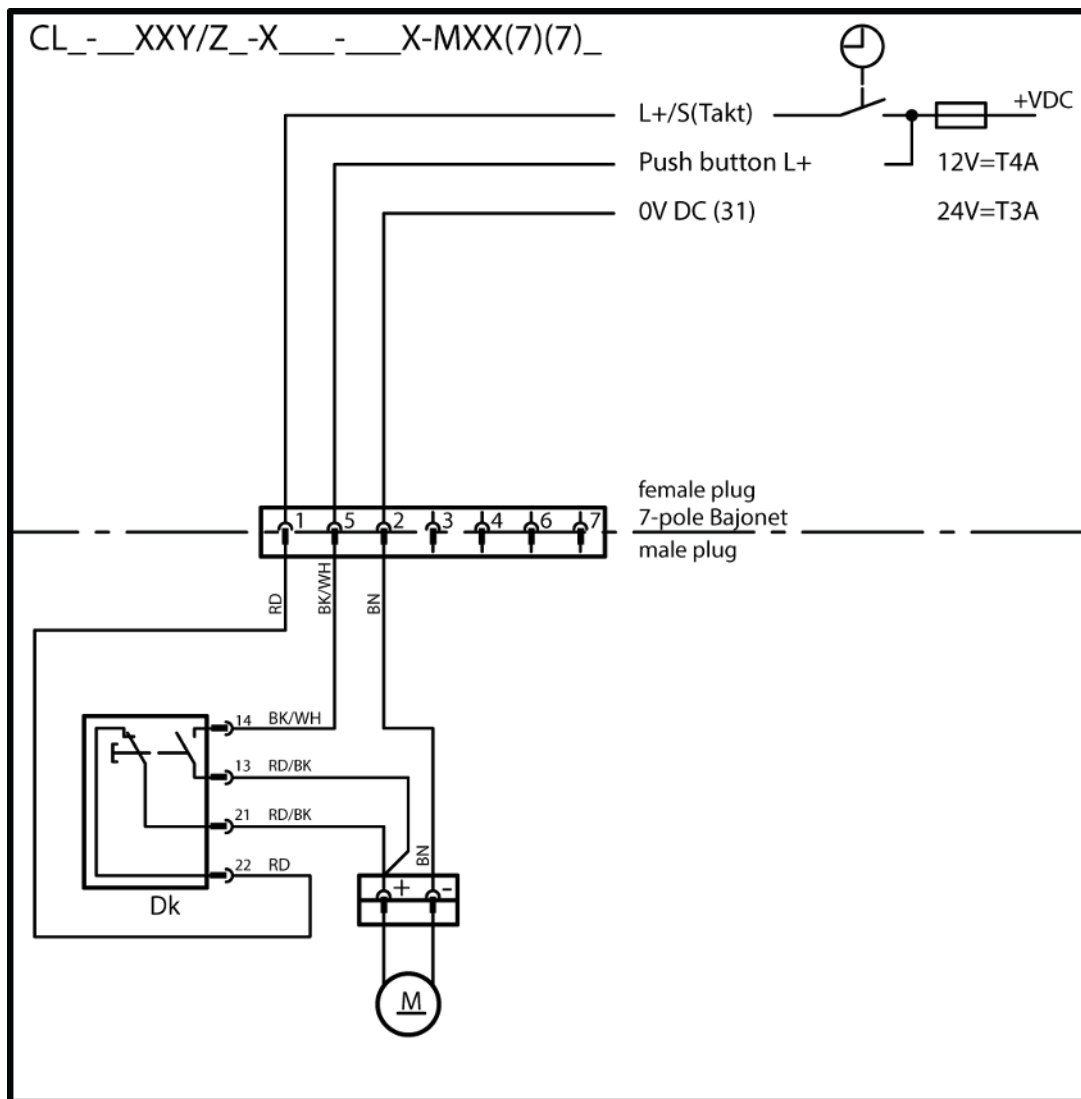Fig. 27




15.8 CL_-__XXX_-X_X-__X-MXX(4)(4)_

Table 35

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x 4-pin bayonet connector
- ✓ 12 or 24 VDC
- ✓ Mobile applications

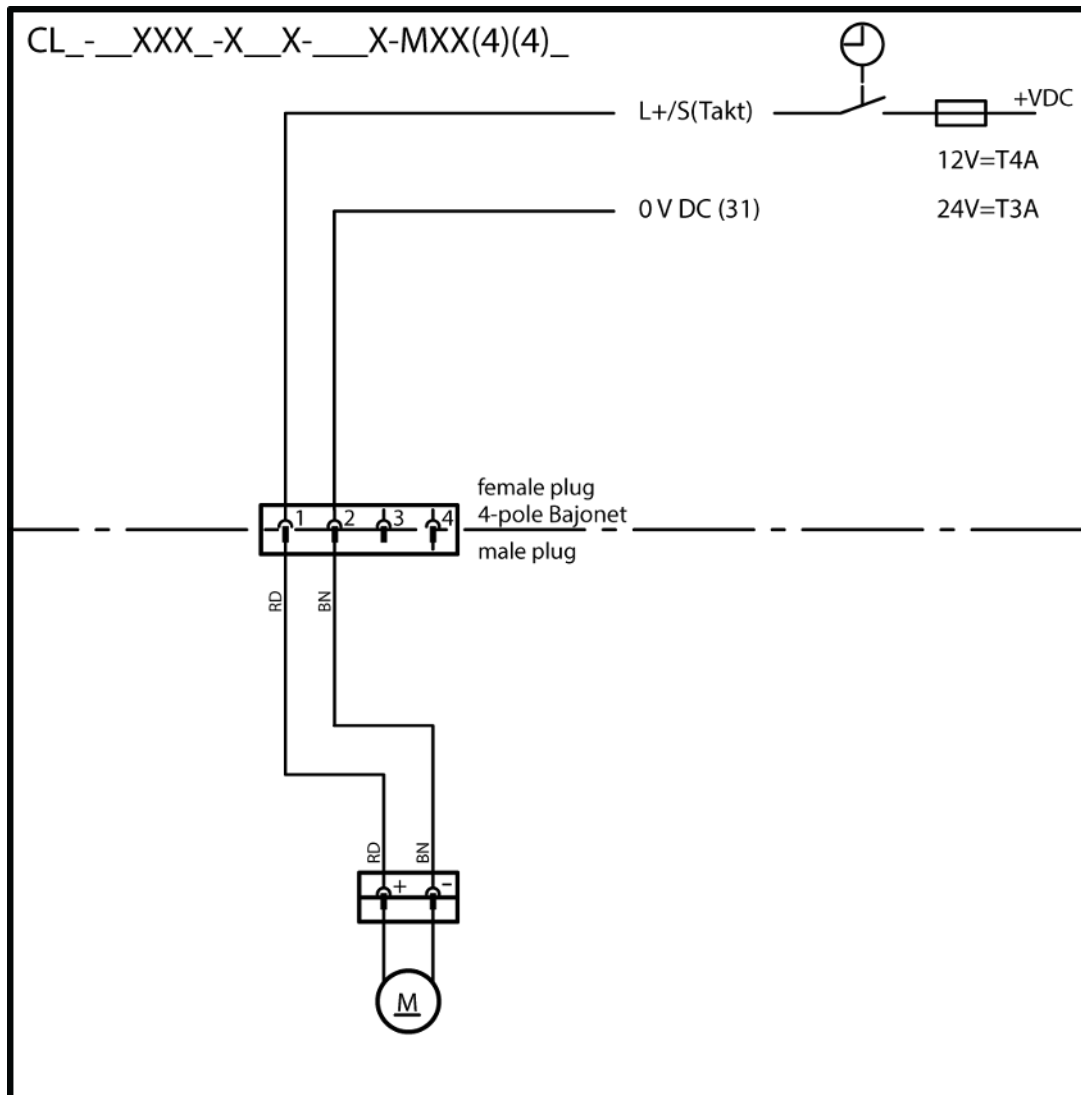Fig. 28




15.9 CL_-_1XY/Z_-X_FX-__X-X(A)(A)(W)(W)_

Table 36

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x 4-pin M12 connector (A-coded)
- ✓ Button for additional lubrication
- ✓ 24 VDC
- ✓ 1 x rectangular connector
- ✓ Low-level signal
- ✓ Industrial applications

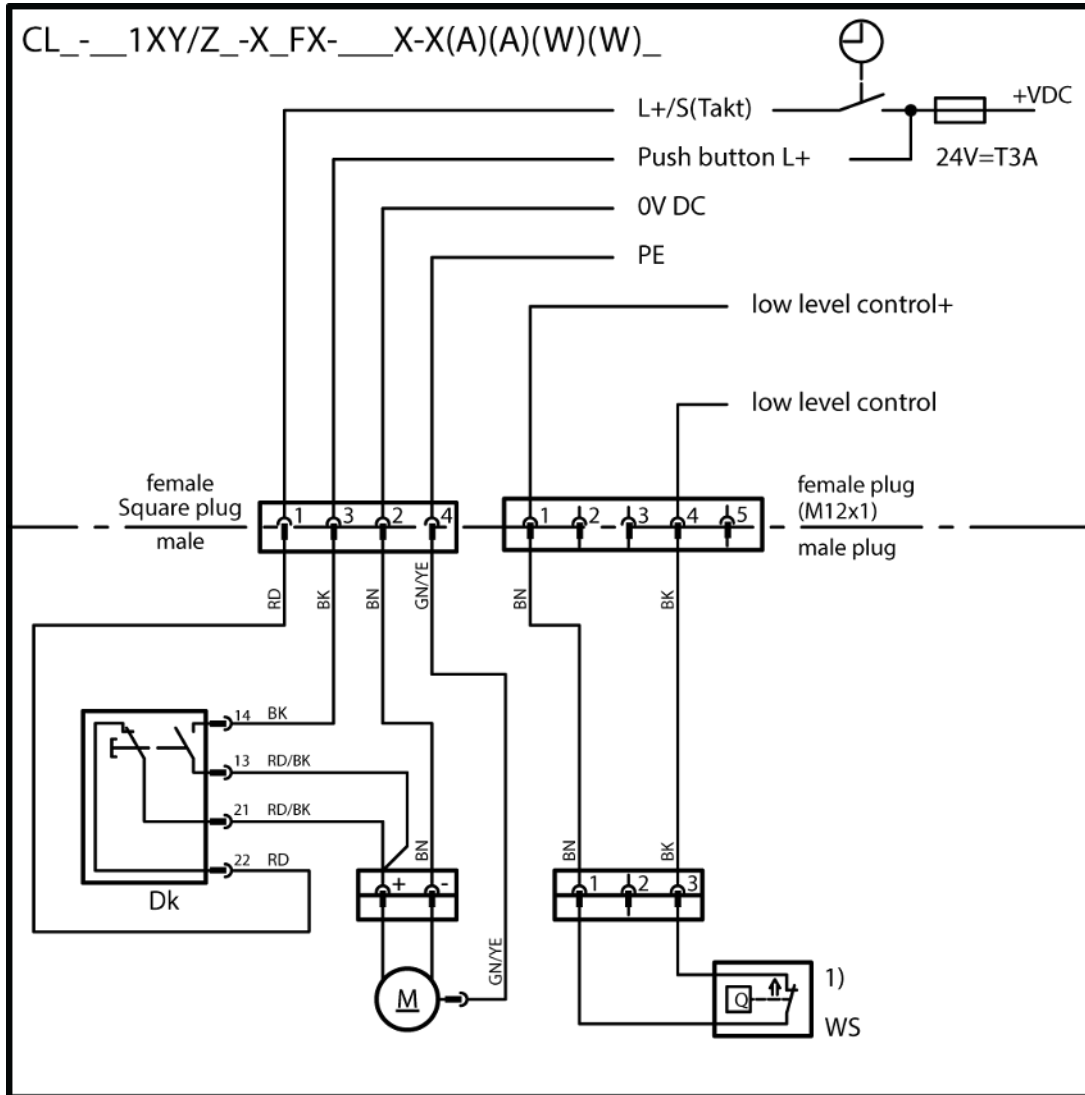Fig. 29



1) Contact opens at minimum fill level


15.10 CL_-__1XX_-X_FX-__X-X(A)(A)(W)(W)_

Table 37

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x 4-pin M12 connector (A-coded)
- ✓ Low-level signal
- ✓ 24 VDC
- ✓ 1 x rectangular connector
- ✓ Industrial applications

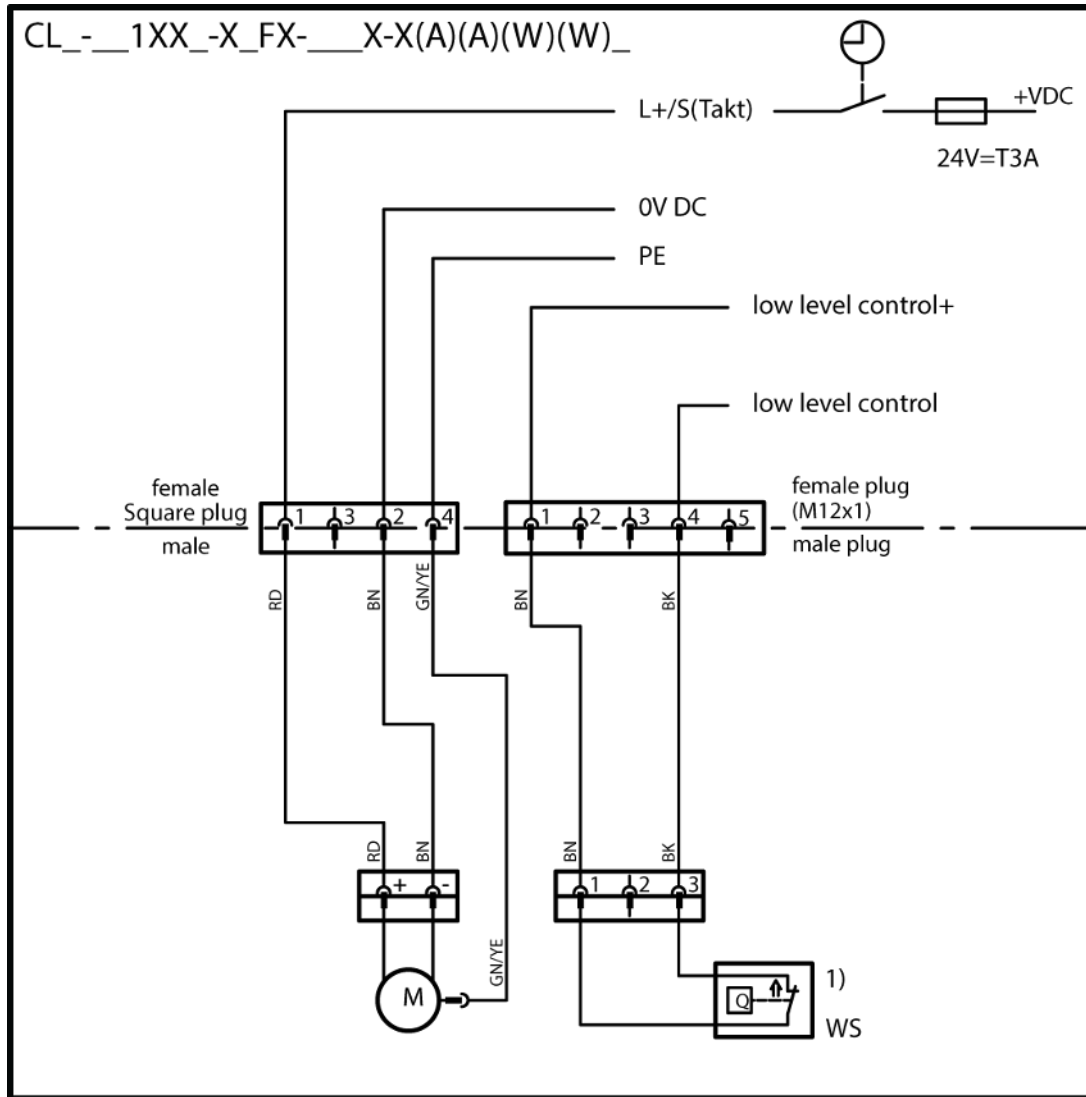Fig. 30



1) Contact opens at minimum fill level


15.11 CL_-_XXY/Z_-X_-_X-XXX(W)(W)_

Table 38

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x rectangular connector (3+PE) ✓ Button for additional lubrication ✓ 24 VDC
- ✓ Industrial applications

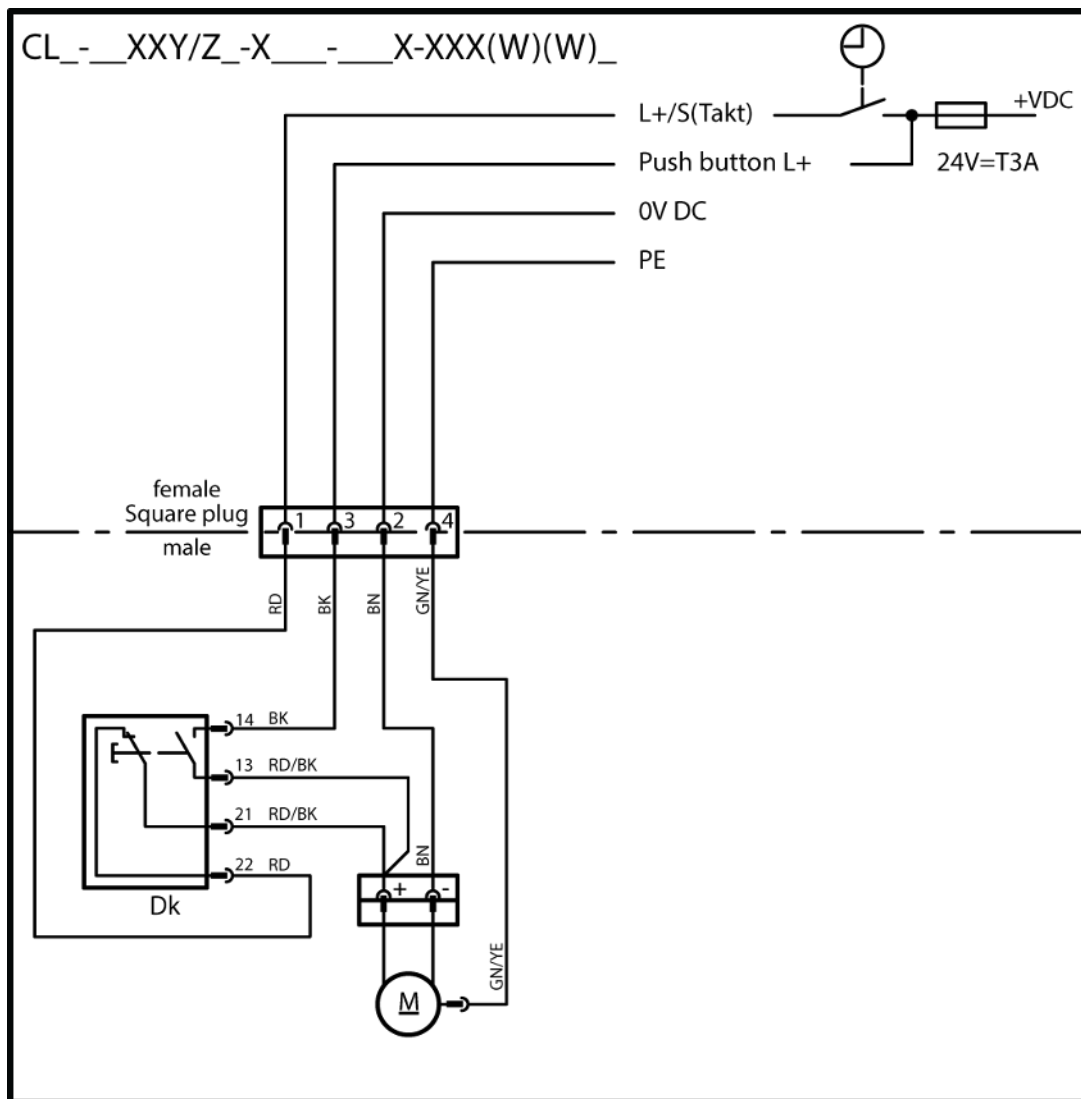Fig. 31




15.12 CL_-__XXX_-X_-__X-XXX(W)(W)_

Table 39

Terminal diagram valid for pumps with the following equipment features

- ✓ 1 x rectangular connector (3+PE) ✓ 24 VDC
- ✓ Industrial applications

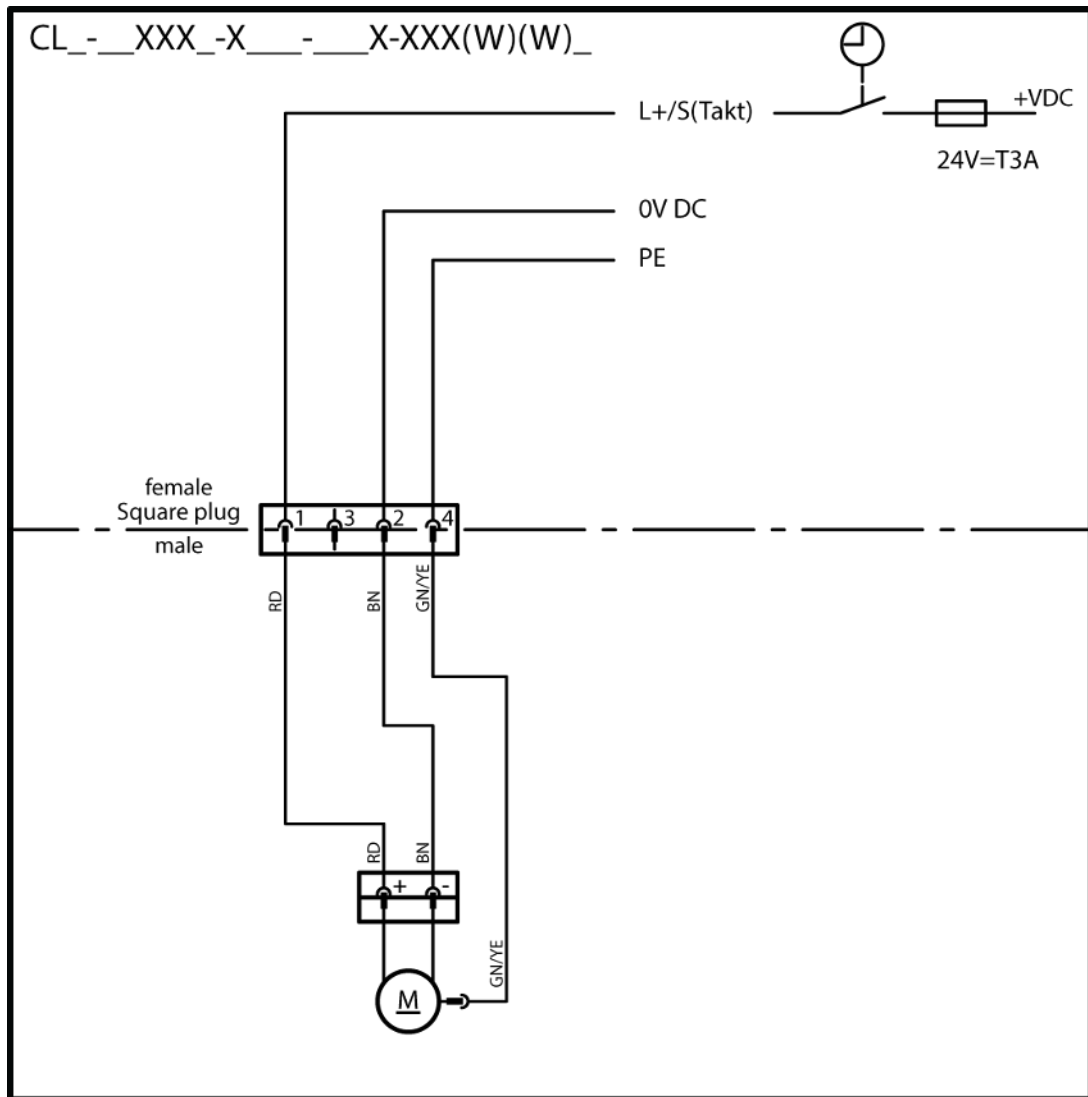Fig. 32



15.13 China RoHS Table

Table 40

部件名称 (Part Name)	有毒害物质或元素 (Hazardous substances)					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
用钢和黄铜加工的零件 (Components made of machining steel and brass)	X	0	0	0	0	0

本表格依据SJ/T11364的规定编制 (This table is prepared in accordance with the provisions of SJ/T 11364.)

0 :	表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。 (Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.)
X :	表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572标准规定的限量要求。 (Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.)

skf.com/lubrication

® SKF is a registered trademark of the SKF Group.

™ eLube is a trademark of the SKF Group.

© SKF Group 2024

Reprint or reproduction of the contents of this information - even in part - is permitted only with SKF's prior written consent.

951-171-064-EN 20.11.2023